



# Operator Manual

## H-800 BP555e

### Series Of Tape Dispensers



661 09/2000

#### BETTER PACKAGES®

##### Caution



If an object falls into one of the cover guide arm slots, disconnect power and notify service personnel.

##### Caution



Metal surfaces of the heater may attain temperatures up to 90 degrees Celsius (194 degrees Fahrenheit).

##### Caution

This equipment generates, uses, and can radiate radio energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

##### Caution



When moving the tape dispenser from one location to another, power must be disconnected and the water bottle, water tank and brushes should be removed to prevent spillage that could result in an electrical shock hazard.

**Note:** Power must be removed before attempting to clear a tape jam.

**Note:** The top cover is interlocked such that the unit will not operate if the cover is not fully closed.

09/2000

BP555e

## Section 1 - Unpacking and Setup

|   |    |
|---|----|
| Unpacking the tape dispenser                                    | 1  |
| Checking the contents   | 1  |
| Fill out the Warranty Card                                      | 2  |
| Preparing the unit for operation                                | 3  |
| Adjusting the Roll Guides                                       | 3  |
| Loading the Tape  | 5  |
| Checking the Upper Tape Plate                                   | 7  |
| Installing the Bottle and Water Tank                            | 9  |
| Mounting the tape dispenser to the work bench - <b>Optional</b> | 12 |
| Attaching the power cord  | 14 |

## Section 2 - Detailed Operation

|  |    |
|--|----|
| Turning the system "ON"  | 17 |
| Adjusting the setting on the heater assembly                     | 18 |
| Selecting the Tape Length (Standard)                             | 19 |
| Selecting the Tape Length (Automatic)                            | 20 |
| To dispense a random length of tape                              | 21 |
| To dispense a specific length of tape not on a number button     | 22 |
| To dispense tape longer than the amount on a number button       | 23 |
| To dispense a tape shorter than the amount on a number button    | 24 |
| To dispense a length of tape twice the length of a number button | 25 |
| To adjust the length of a number button and then double it       | 26 |
| To repeat the length previously dispensed (Standard)             | 27 |
| To repeat the length previously dispensed (Automatic)            | 28 |

## Section 3 - How to Seal Your Cartons

|   |    |
|---|----|
| Advantages of water activated Gummed Tape         | 32 |
| Choosing the best tape for your application       | 33 |
| Identifying the types of tape                     | 33 |
| What you should know about glue formulas          | 34 |
| The different grades of Sealing Tape              | 35 |
| Selecting tape                                    | 35 |
| Proper tape moistening                            | 36 |
| Adjusting the amount of water applied to the tape | 37 |
| Setting the heater controls                       | 38 |
| Choosing the correct tape length                  | 39 |
| Apply tape to the carton                          | 39 |

## Section 4 - Maintenance

|                                       |    |
|---------------------------------------|----|
| Washing the tank, brushes, and bottle | 42 |
| Cleaning the Shear Blades             | 44 |
| Clearing Jams                         | 45 |
| Changing the Fuse                     | 48 |
| Lubrication                           | 50 |
| Cleaning – Inside and Out             | 51 |

## Section 5 - Specifications

|                          |    |
|--------------------------|----|
| Model descriptions       | 52 |
| Technical specifications | 53 |
| Port Connectivity        | 54 |

## Section 6 - Service and Warranty

This section provides warranty information and how to obtain service.

|                                |    |
|--------------------------------|----|
| Limited Warranty               | 55 |
| How to contact Better Packages | 56 |

## Index

## Section 1 - Unpacking and Setup

### Unpacking

When you open the top flaps on the box for the tape dispenser, there will be instructions for removing the tape dispenser from its packaging.

Save the box and packing materials in case you need to ship the unit at some future time.

### Checking the Contents

Packaged inside the tape dispenser, under the top cover are the following items: See Figure 1.

- Brush Assembly (three beveled brushes assembled together)
- Water Tank (a black plastic piece with a metal bracket attached to it)
- Bottle (a white plastic bottle with a screw cap)
- Upper Tape Plate
- Power Cord
- Operating Guide
- Warranty Card (inside the Operating Guide)

## Fill Out the Warranty Card

Filling out the warranty card and returning it to us protects your warranty and allows us to keep you informed of product upgrades.

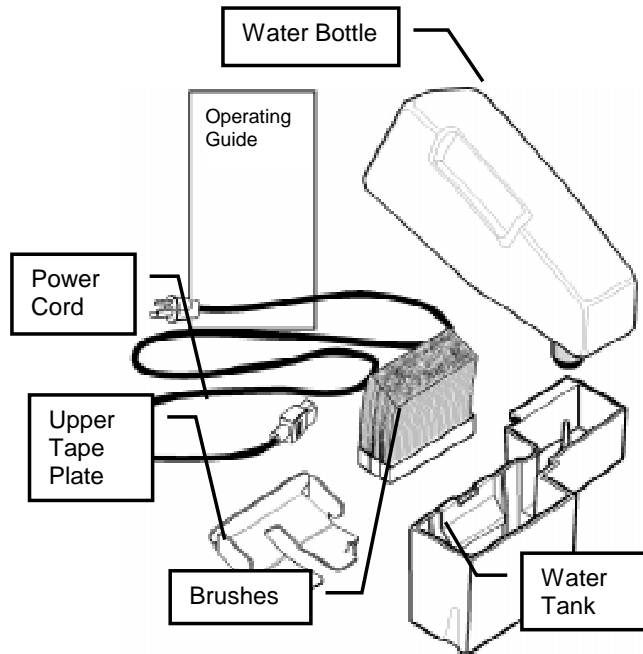


Figure 1 - Checking Package Contents

## Preparing the Unit for Operation

### Adjusting the Roll Guides

Roll guides fit into slots in the front and bottom panels of the tape basket. They hold the tape roll vertical to allow the tape to unwind. You must adjust these guides for the size of the tape being used.

**NOTE:** This machine can dispense tapes from 1-½" to 3.0" wide.

#### Procedure:

1. Remove a guide from its current position by grasping the guide, lifting it up and pulling the bottom of it to the rear of the unit.

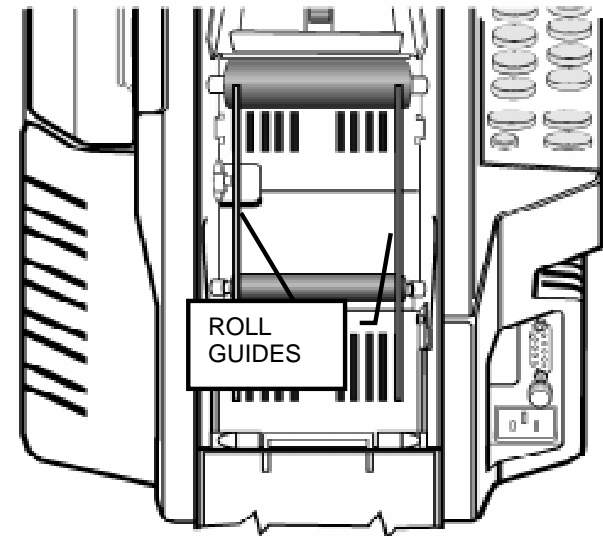


Figure 2 - Removing the Guides from the Slots

2. Reinsert each guide pressing it first into the bottom slot and then rotating it into the front slot. See Figure 3.

- Set the space between the guides to just larger than the width of the tape.
- Use the guides to center the tape as much as possible by inserting each guide into a slot the same distance from the outside edge of the panel. For example, if you set the bottom part of the guide in the second slot from the outside edge of the panel, set the front part of the guide also into the second slot from the outside edge.

Insert all four tabs the same number of slots from the outside edge.


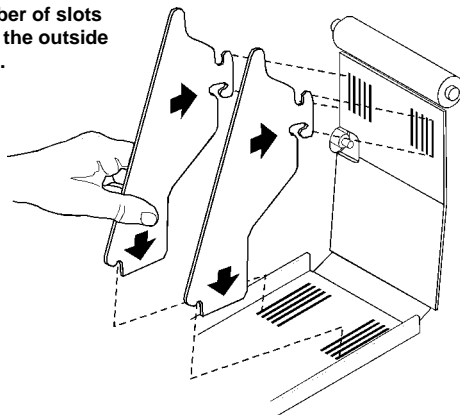


Figure 3 – Reinserting the Roll Guides

## Loading the Tape

1. Cut the end of the tape so that it has a clean, square end to feed under the drive wheel.
2. Load the tape roll into the basket so that:
  - The adhesive side is down.
  - The roll is upright between the roll guides. See Figure 4.

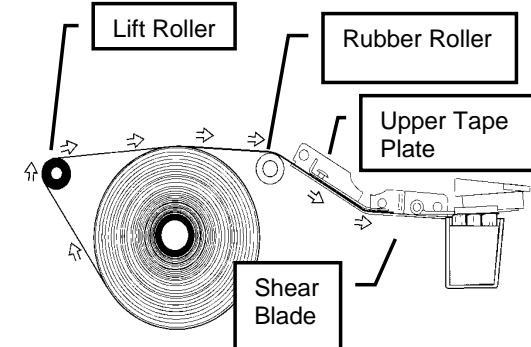

### Feed the tape:

- Adhesive side down
- Around the lift roller
- Over the rubber roller
- Under the upper tape plate
- Under the guide bar
- Up against the shear blade


Figure 4 - Loading the Tape Roll

- The end of the tape goes over the:
  - ♦ Top of the roll from back to front.
  - ♦ Lift Roller then rubber Roller
- The end of the tape is fed under the top tape plate and drive wheel; and is butted against the shear blade.


## 3. Close the top cover.

**NOTES:**

- The front part of the top cover is attached to the rear part with plastic pivot points. To attach or detach the front part to or from the rear, squeeze the back part of the top cover just below the pivot point to spread the opening where the front part attaches. This will allow the pivot knobs to fit into the slots. See Figure 5.
- Be sure the top cover is fully closed. There is a safety interlock built into the dispenser which prevents the machine from operating unless the cover is completely closed.

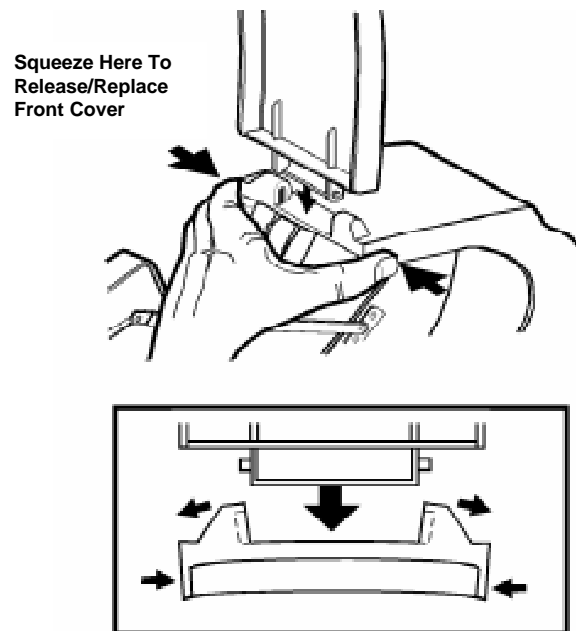*Figure 5 - Attaching/Detaching the Front Top Cover***Checking Upper Tape Plate**

Make sure the upper tape plate is in its proper position as shown in Figure 6.

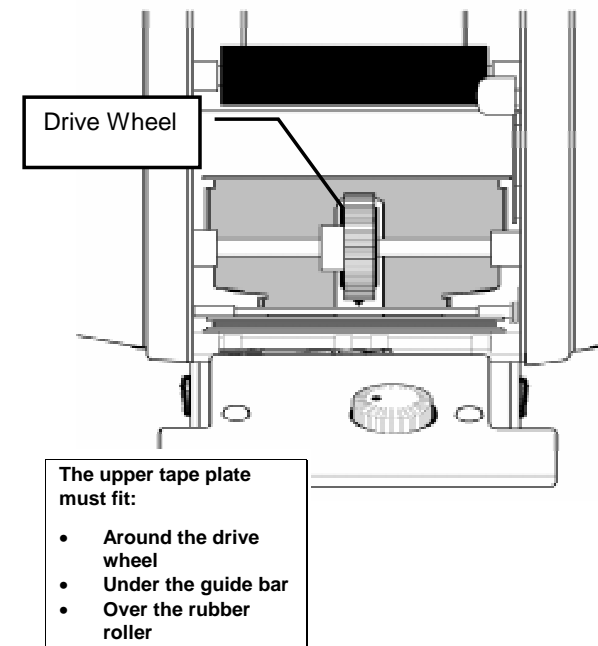**Figure 6 - Upper Tape Plate in Proper Position**

If the plate is not correctly positioned:

1. Hold the upper tape plate by its rear edge (see Figure 7), and guide it forward so that the front slot centers around the drive wheel.

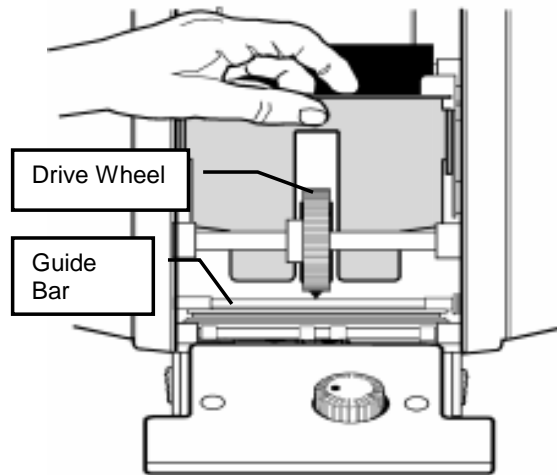


Figure 7 - Positioning the Upper Tape Plate

2. When the cutouts in the sides of the plate are above the retaining buttons, drop the plate down and slide it forward as far as it will go.

**NOTE:** There is a round guide bar just before the cutting blade. The front of the upper tape plate should be under that guide bar.

## Installing the Bottle and Water Tank

1. Insert the brush assembly in the water tank. The brush assembly must be tilted toward the dispenser so that the cotter pin will clear the retaining bracket as it is pressed into place. See Figure 8. Then rotate the brush forward so that it seats flatly on the bottom of the water tank. The edge of the base of the brush should be under the retaining bracket.

Brushes must be angled toward the front of the dispenser in order to work.

Installing the brushes backwards will cause a troublesome tape jam.

At first, tilt the brush toward the dispenser so that the head of the cotter pin clears the retaining bracket as you push the brushes into the tank.

Then tilt the brush back so that it seals flatly on the bottom of the tank.

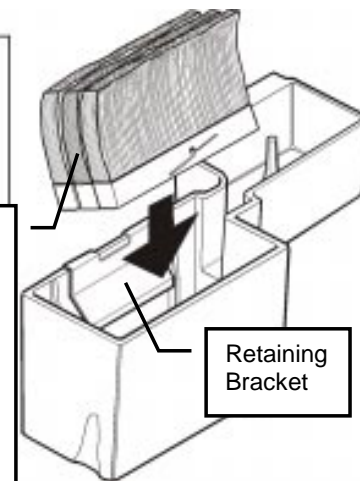


Figure 8 - Inserting the Brush into the Water Tank


2. Lift the front of the heater assembly and slide the water tank into position at the front of the dispenser.



**CAUTION:** Under normal operating conditions, the bottom of the heater assembly may be HOT. Handle the assembly ONLY by the tabs sticking out from the sides. See Figure 9.

The bottom of the water tank should be even with the edges of the shelf it sits on and the water tank will drop slightly into the shelf when it is correctly positioned.

3. Lower the heater assembly

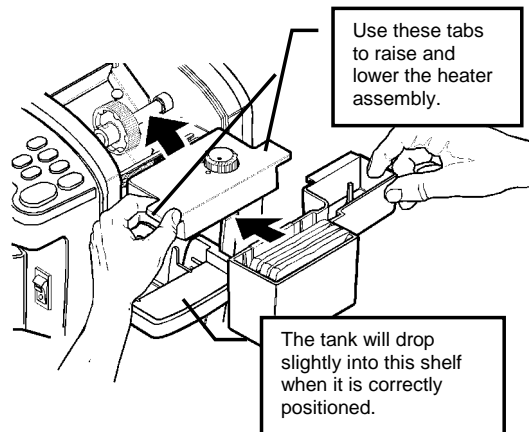


*Figure 9 - Handling the Heater Assembly*

4. Fill the bottle with water.

**NOTE:** We recommend using Penetron® or a similar wetting agent if you have hard water. This will keep mineral deposits and bacteria from building up in the brushes, bottle, and water tank. These deposits can lead to poor tape adhesion. The Penetron helps the water more quickly penetrate into the adhesive for better performance.

5. Position the bottle onto the right side of the dispenser. The spring-loaded center of the bottle's cap must be on the pylon protruding up from the water tank. See Figure 10.

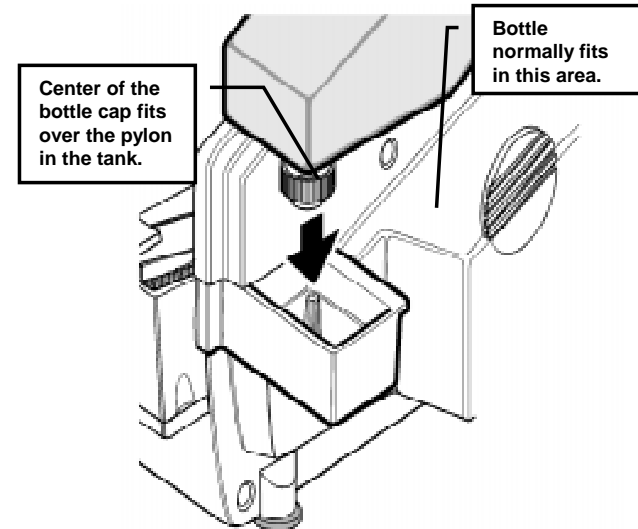

*Figure 10 - Attaching the Bottle to the Dispenser*



## Mount the Dispenser to the Work Bench - Optional -

The dispenser may be bolted to the work bench or table that it sits on. The main reason to do this is the dispenser can't be knocked off the bench-top should someone bump into it.

The dispenser is shipped with four (4) rubber feet attached to the bottom panel by 10-24 phillips head screws. A template is included at the end of this manual that shows the spacing of these four mounting holes.

1. Drill four holes into the top of the bench. Use the template supplied to locate these holes.
2. Remove the screws and washers from the bottom panel that hold the feet in place.
3. Measure the thickness of the bench top. Obtain 4 (four) 10-24 screws/bolts that are 9/16" to 1-1/16" longer than the thickness of the bench top. For example, if the bench top is 1" thick, use screws 1-9/16" to 2-1/16" long to attach the dispenser to the bench top.
4. Position the dispenser over the bench so that their mounting holes are lined up.  
**IMPORTANT:** Keep the feet between the dispenser and the bench top. This will protect both the dispenser and the bench from vibration from the dispenser's normal operation.

5. Insert the 10-24 screws through the bottom of the bench, through the rubber feet, into the threaded holes in the bottom panel. See Figure 11.

- Use Loctite™ or a similar thread locking compound on the threads of the screws to prevent them from loosening.
- Tighten the screws until they are snug, but do not tighten them so much that the rubber feet are compressed.
- Use washers under the heads of the bolts or screws used to secure the dispenser to the bench top.

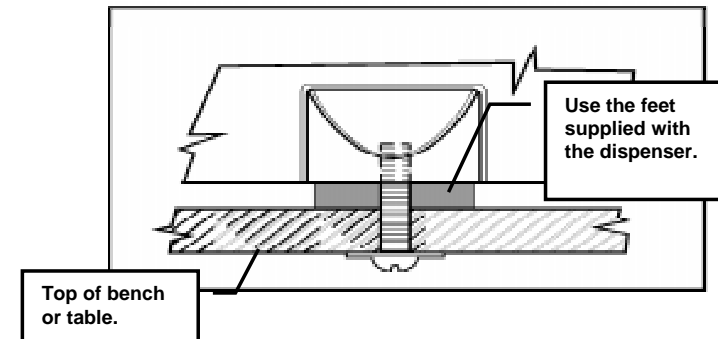


Figure 11 - Mounting the Dispenser to a Bench Top

### Attach the Power Cord

1. Ensure that the power switch is in the OFF (down) position.

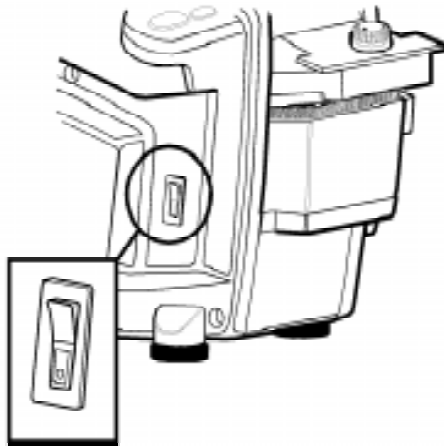


Figure 12 – Power Switch Location

2. Attach the female end of the power cord to the dispenser connector. See Figure 13.

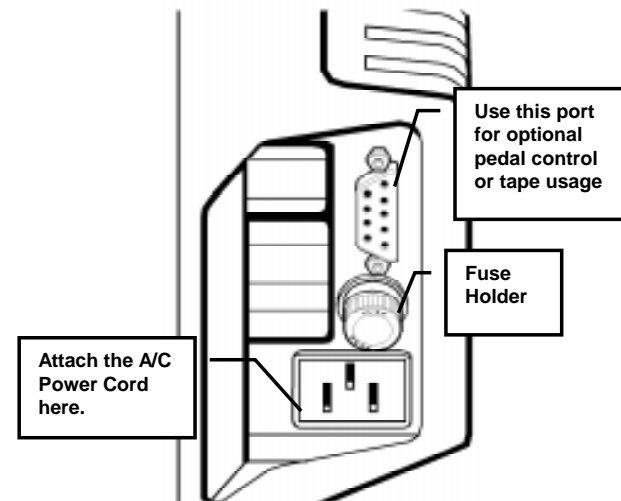


Figure 13 - The Electrical Panel

Continued on the next page.

## Section 2 - Operation

### Turn the System "ON"

Turn the power switch to the "ON" (up) position. The switch will light and the dispenser will "beep" once. See Figure 14.

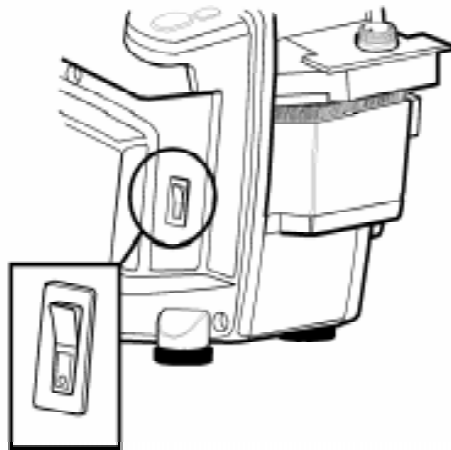


Figure 14 - On/Off Switch Location

### Adjust the setting on the heater assembly.

Finding the correct setting for the tape you are using is a matter of simple testing. Set the adjustment knob to a low or middle setting to start and test the tape for performance. Use the lowest temperature setting that best meets your needs. See Figure 15. Refer to Section 3 on how to seal with gummed tape.



**CAUTION:** The bottom of the heater assembly gets **HOT!** Handle the heater only by the tabs protruding from the sides of its top. See Figure 15.

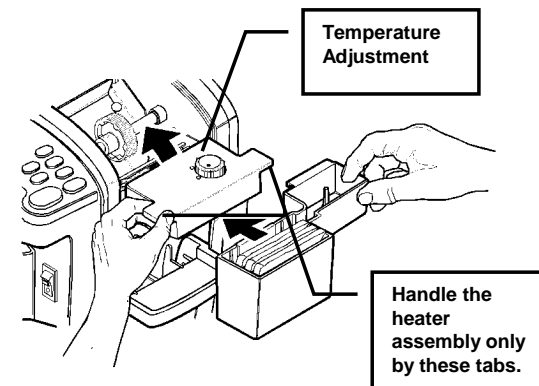


Figure 15 - Handling the Heater Assembly

When the heat is properly adjusted, the tape will adhere quickly to the parcel. Too low or too high a setting may result in the tape taking too long to properly adhere.

## Select the Tape Length (Standard Model)

Pressing a button or combination of buttons allows you to dispense tape in lengths from 4" to a maximum of 120" in increments of ½". See Figure 16a.

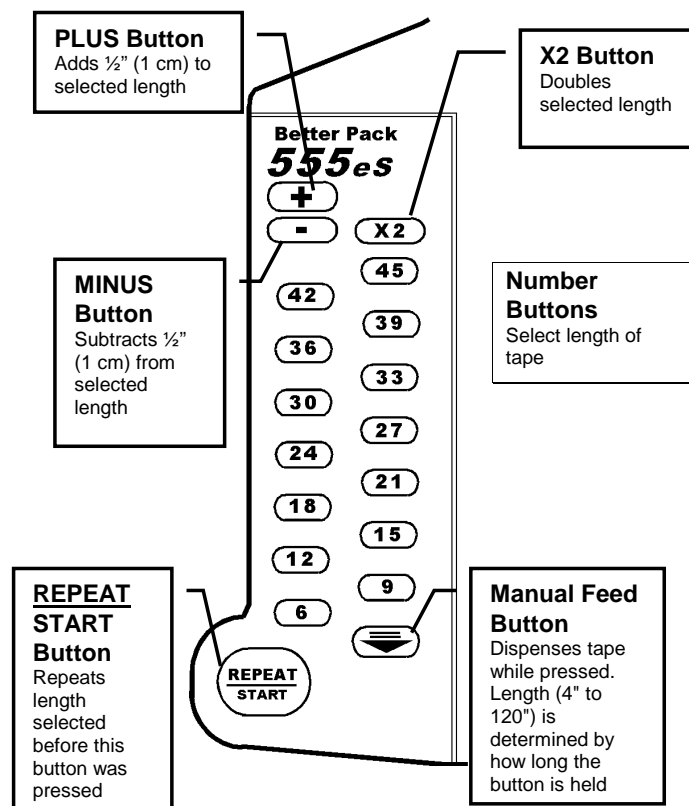


Figure 16a - Keypad for Tape Length Selection

## Select the Tape Length (Automatic Model)

Pressing a button or combination of buttons allows you to dispense tape in lengths from 4" to a maximum of 120" in increments of ½". See Figure 16b.

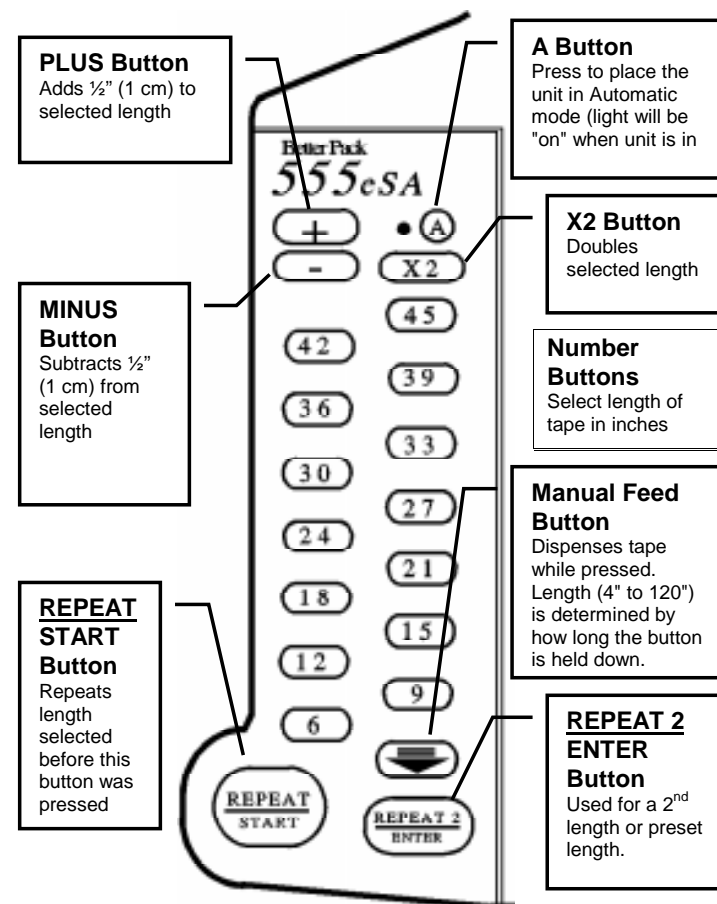


Figure 16b - Keypad for Tape Length Selection

### To dispense a random length of tape:

Press and hold the manual feed button (down arrow) until the desired length of tape is dispensed.



The Manual Feed Button (lower right on the keypad)

It will dispense a length of 4" (10 cm) to a maximum of 120" (305 cm) depending upon how long the button is held down.

### To dispense a length of tape equal to a number button length:

|                 |                 |
|-----------------|-----------------|
| Press <b>42</b> | To dispense 42" |
| Press <b>15</b> | To dispense 15" |

### To dispense a specific length *not* on a number button:



 



 
- You can **add or subtract** ½" increments from any number button length.
- You can **double** any button number length.
- You can adjust a number button length (longer or shorter) and *then* double it.
- You can repeat the length previously dispensed with a single button.



### Error Notification



**NOTE:** If you press a combination of keys that doesn't work, the system lets you know by beeping three times.

  If this happens, re-enter the key or combination of keys to produce the length or lengths that you require.








To dispense tape *longer* than the amount on a number button:


|  |  |
|--|--|
| Press    | To dispense 42 ½"<br>(one ½" is added for each press of the  button). In this case it is ½" (1 x ½"). |
| Press:    | To dispense 43"<br>(one ½" is added for each press of the  button. In this case it is 1" (2 x ½").    |


 



Press the  button once for each ½" you want to **add** to a number button. You can press the  button as many times as you want before you press the number button. For example;

- To dispense 42 ½" of tape, press the  once (to add ½") and then press the  number button. A 42 ½" length of tape is dispensed.

To dispense tape *shorter* than the amount on a number button:

|   |   |
|---|---|
| Press     | To dispense 41 ½"<br>(one ½" is subtracted for each press of the  button). In this case it is ½" (1 x ½"). |
| Press    | To dispense 41"<br>(one ½" is subtracted for each press of the  button. In this case it is 1" (2 x ½").    |

Press the  button once for each ½" you want to **subtract** from a number button. For example;

- To dispense 41 ½" of tape, press the  button once (to subtract ½") and then press the  button. A 41 ½" length of tape is dispensed.
- To dispense 41" of tape, press the  button twice (to subtract one inch) and then press the  button. A 41" length of tape is dispensed.
- You can press the  button as many times as you want before you press the number button.

### To dispense a length of tape *twice* the length of a number button:

|                           |  |
|---------------------------|--|
| Press <b>X2</b> <b>42</b> | To dispense 84".<br>(2 times 42 = 84)  |
| Press <b>X2</b> <b>27</b> | To dispense 54".<br>(2 times 27 = 54). |

First press the **X2** button and then press the number button.

For example:

- Pressing **X2** and then pressing the **42** button will dispense 84" of tape.
- Pressing **X2** and then pressing the **27** button will dispense 54" of tape.

### To adjust the length of a number button and then double it:

|   |   |
|---|---|
| Press:<br><b>+</b> <b>+</b> <b>+</b><br><b>X2</b> <b>30</b> | <b>To dispense 63",</b><br>30" plus 1 ½" (for the three <b>+</b> buttons) = 31 ½".<br>31 ½" times 2 (for the <b>X2</b> button) = 63". |
|---|---|

The **X2** button can be used together with the **+** or **-** button to double the length of an adjusted number button. For example;

- If you press the **+** button three times (to add 1 ½"), press the **X2** button, and then press the **30** number button, 63" of tape will be dispensed.

## To repeat the length previously dispensed (Standard Model):



*The REPEAT Button – Lower left on the keyboard*

The dispenser “remembers” the last length of tape dispensed and stores that value in its memory.

Pressing the **REPEAT** key dispenses the same length of tape that was previously dispensed. This is especially handy if you are dispensing a tape length that was adjusted using the **X2** or **+**, **-** buttons.

The **REPEAT** key also repeats standard number button lengths.

Each time you dispense a different length of tape by pressing a different button or combination of buttons, that new figure:

- Is stored in the **REPEAT** button memory
- Becomes the length dispensed the next time you press the **REPEAT** button.


## To repeat the length previously dispensed (Automatic Model):




The dispenser “remembers” the last two length of tape dispensed and stores those values in its memory.


### Standard Mode.

To dispense a Six Inch tape, press **6** once. Remove the piece of tape.

Press  this will also dispense a six inch tape.

Press **9** and a nine inch piece of tape will be dispensed. Remove the piece of tape.

Press  a nine inch piece of tape will again be dispensed.

Remove the piece of tape ... press  a six inch piece of tape will be dispensed.

In this way, any two lengths can be memorized by the unit's electronics and can be repeated using






**Automatic Mode:**


In the Automatic Mode, removing a piece of tape from the dispenser causes another piece of tape to be dispensed automatically.

Additionally, in the Automatic Mode, the dispenser can remember up to three tape lengths and automatically dispense them in the order in which they were entered.


**To Activate Automatic Mode:**

- 1) Make sure that the last piece of tape dispensed has been removed.
- 2) Press 
- 3) The indicator will be illuminated (red).

**To Repeat One Tape Length Automatically:**

Press the  ... a six inch tape will be dispensed. Remove the six inch tape.

Press 


Press 


A six inch piece of tape will be dispensed - remove it and another six inch piece of tape will be dispensed automatically.


**To Repeat Two Tape Lengths Automatically:**


First make sure the memory is clear of any lengths previously stored.


To do this, press "A", the indicator turns off. Remove any piece of tape that may have been dispensed but not removed. Press "A" again. The indicator lights (red) and the memory is cleared and ready for your input.

Press  ... a six inch tape will be dispensed. Remove the six inch tape.

Press 

Press  ... a nine inch tape will be dispensed. Remove the nine inch piece of tape.

Press 

 
Press 

A six inch piece of tape will be dispensed. Remove the six inch piece of tape and a nine inch piece will automatically be dispensed. Removing the nine inch piece will then automatically dispense a six inch piece.


### To Repeat Three Tape Lengths Automatically:

First make sure the memory is clear of any lengths previously stored.


To do this, press "A", the indicator turns off. Remove any piece of tape that may have been dispensed and not removed. Press "A" again. The indicator lights (red) and the memory is cleared and ready for your input.

Press  ... a six inch tape will be dispensed. Remove the six inch tape.


Press 

Press  ... a nine inch tape will be dispensed. Remove the nine inch piece of tape.

Press 

Press  ... a twelve inch tape will be dispensed. Remove the twelve inch piece of tape.

Press 

Press 

A "6" inch piece of tape will be dispensed and as each successive piece is removed the unit automatically continues to dispense in the correct sequence: ... 9, 12, 6, 9, 12, 6, 9, 12 ... and so on.

## Section 3 – Tips on Carton Sealing

### Advantages of Water Activated Tape:

- Strong, secure seal
- Neat appearance
- May be printed on during application
- Adheres well even in dirty, dusty environments
- Up to ten times stronger than plastic tape
- Doesn't stick to itself during application
- Permanent bond formed when the adhesive penetrates the corrugated board
- Unaffected by extremes of cold, heat, light or humidity
- Even when damaged, it retains strength. It doesn't run, tear, or stretch
- Tamper evident if the seal is compromised
- Environmentally friendly and recyclable
- Eliminates repetitive wrist motions of hand-held guns
- Discourages theft – tape won't "pop off"
- Economical – never need more than one strip of tape per seal

Sealing cartons with reinforced gummed tape has been called "the professional's choice" because of its superior strength, durability and neat appearance.

### Choosing the Best Tape for Your Application

Depending on its type and manufacturer, water activated tape is also called:

- Gummed paper tape
- Kraft tape
- Reinforced tape
- Reinforced paper tape

### Identifying the Types of Tape

The following table list the types of tape and their identifying characteristics:

| Type                                     | Characteristic  |
|--|---|
| Water Activated or Gummed Tape           | Gummed adhesive on the back which must be wet, or reactivated, by water |
| Paper Tape or Kraft Paper Tape           | Made from paper only with no additional reinforcing material            |
| Reinforced Tape or Reinforced Paper Tape | Contains strands of reinforcing material                                |

Tapes are differentiated by:

- Their color – natural or white
- The weight of the paper used in the top and bottom sheets
- The presence of reinforcing material and the thickness, the number of reinforcing strands and the weave pattern of the strands
- The glue formula

**What you should know about adhesive formulas:**

- Almost all adhesives today are starch-based and therefore very friendly to users and the environment.
- Open time is the length of time (in seconds) that it takes the adhesive to begin to bond to the corrugated.
  - Adhesive formulas that are quick to set have a short “open time”.
  - Adhesives that take longer to set have a longer open time.
- As long as the adhesive has not yet set, the moistened piece of tape may be straightened or move to another location.
- If there is stress on the carton seal, as in the case of an over-stuffed carton, then it is desirable to have a shorter (quicker) open time.
- If the carton is large, then it is desirable to have a longer open time.

**The Different Grades (Weights) of Sealing Tape (listed in order of increasing strength):**

- Paper tape
- Economy grade reinforced tape
- Light weight reinforced tape
- Medium weight reinforced tape
- Heavy weight reinforced tape
- Extra heavy weight reinforced tape
- Boxmakers tape

**Selecting Tape:**

- Use the lightest and thinnest tapes for cartons:
  - Of low value
  - Shipped a short distance
  - Stacked on a pallet and wrapped in shrink wrap
- Use the heavier and thicker tapes for cartons:
  - That are heavy
  - That have great value
  - That are shipped long distances
  - That are shipped individually and are not shrink wrapped.

**Proper Tape Moistening:**

Dispense a piece of tape and examine the adhesive surface. The tape should:

- Be evenly wet
- Have no dry spots
- Have no spots where water is running off the surface

Rub the wet adhesive with your finger.

- The adhesive should have an “oily” feel and consistency.
- You should be able to move the adhesive underneath your finger.

When you rub two wet adhesive surfaces of the tape together against each other, you should see “strings” of adhesive stretching between the two surfaces as you pull them apart, looking much like taffy as it is pulled.

If the tape is **too wet or watery**, it:

- Will not set fast enough
- May slip slightly over the surface of the carton, causing a “loose” seal

If the tape is **not wet enough**, it:

- May be tacky or sticky like pressure sensitive tape, but not “oily” like properly moistened tape
- Is too dry to properly activate the adhesive which will prevent a permanent bond from forming (because the adhesive cannot penetrate the corrugate fibers).
- May too easily pull off the carton during handling and transportation.

**Adjusting the Amount of Water Applied to the Tape:**

- Adjust the height of the water bottle:
  - Higher to apply more water
  - Lower to apply less water
- Never use any dispenser for water activated tape without a water bottle.
- Do not add water to the water bottle “whenever it looks low”. This will always:
  - Cause overwetting when the tank is first filled
  - Cause underwetting when it needs to be refilled

### Setting the Heater Controls

In most situations, the application of heat is helpful for reactivation of the adhesive.

Different tape manufacturers use different adhesive formulas. Some require more or less heat than others.

You should experiment with different heat settings to optimize adhesive performance for the tape you are using and the conditions under which you are operating. Carton sealing done in a cold meat packing plant will certainly require a higher temperature setting than will carton sealing done in a tropical plant nursery.

As a general rule, the strength of the adhesive bond will increase as the temperature setting of the heater is increased up to some optimum point. Too much heat:

- Will cause the tape to dry too quickly before the glue has properly set.
- Can cause the tape to curl and become difficult to work with.
- In extreme cases, can cause delamination of the tape, causing the tape to fail.

See Chapter 2 on adjusting the heater.

### Choosing the Correct Tape Length

In **most situations**, the correct length of tape is the total length of the seam to be sealed plus a **two to three inch** (5cm-8cm) overlap on each side.

- On **extremely long cartons**, such as those used for furniture or mattresses, an overlap of **four to five inches** (10cm-13cm) may be best.
- On **very short cartons**, those less than 16 to 20 inches, only a **one or two inch** (3cm-5cm) overlap may be necessary.

### Applying Tape to the Carton

The best way to apply the tape to the carton is:

1. Place the wet tape on the end of one of the flaps to be sealed so that:
  - Half of the tape's width is on one flap
  - The other half is overhanging
2. Fold the flap without the tape down to its closed position.
3. Fold the other carton flap (the one with the overhanging tape) down into its proper closed position so that the overhanging portion of the tape is now in contact with the other flap on the opposite side of the carton.
4. Starting from the middle of the carton, apply a light downward pressure and wipe your hands over the tape on top of the carton flaps. Move from the center to the


sides and then down over the overlapping ends in the sides of the carton.

Sometimes wiping the tape down a second time before releasing the carton is helpful.

This process will ensure:

- Full adhesion of the adhesive
- A strong permanent bond
- A neat professional appearance of the sealed carton.

**NOTE:** It is not necessary to apply more than one piece of tape to any one seam being sealed. Reinforced water activated tape provides an extremely strong seal.

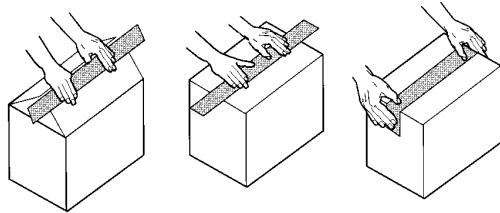

## Section 4 - MAINTENANCE

There is very little maintenance required to keep your tape dispenser working in top condition.

What is required, however, is important to perform.

Maintenance is basically:

- Keeping the machine clear of tape jams
- Cleaning the water tank, bottle, and brushes
- Keeping the shear blade clean
- Keeping the blade oiler moist

These are outlined in the following pages.

## Washing the Tank, Brushes, and Bottle

You should wash the water tank, brushes and bottle with warm water and soap on a weekly basis. This is mostly to clean the hard dried adhesive from the brushes so they remain soft, supple, and wet the tape well for proper adhesion.

Remove the brushes from the tank to remove any old dried adhesive. You will need to tilt the brushes to clear the retaining bracket. Be sure to replace the brushes in the tank correctly. See Figure 17. Facing the brushes in the wrong direction can result in poor moistening and tape jamming.


The brush tips are cut at an angle and in 3 unique lengths. They are designed to be used in one direction only.

**WARNING:** Never cut the ends of the brush tips to remove dried glue ... the brush will be too short and will not work properly.



Brushes must be angled toward the front of the dispenser in order to work. Shorter brushes go in the back.

Installing the brushes backwards will cause a

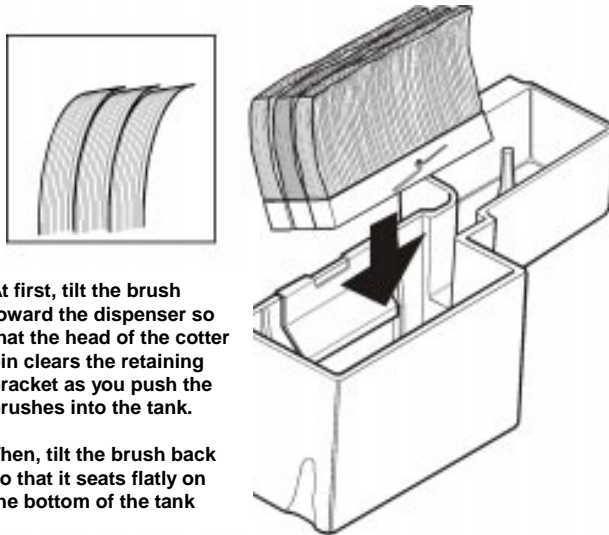

At first, tilt the brush toward the dispenser so that the head of the cotter pin clears the retaining bracket as you push the brushes into the tank.

Then, tilt the brush back so that it seats flatly on the bottom of the tank

Figure 17 - Inserting Brushes into the Tank

## Cleaning the Shear Blades

When using reinforced tapes laminated with asphalt or resin, this material can accumulate on the blades and interfere with cutting the tape. Even paper tape with no reinforcement can cause an accumulation of dust and glue on the blades. Use a small brush and naphtha to remove this accumulation.

**WARNING:** Be sure the dispenser is **OFF** before performing any cleaning operations.


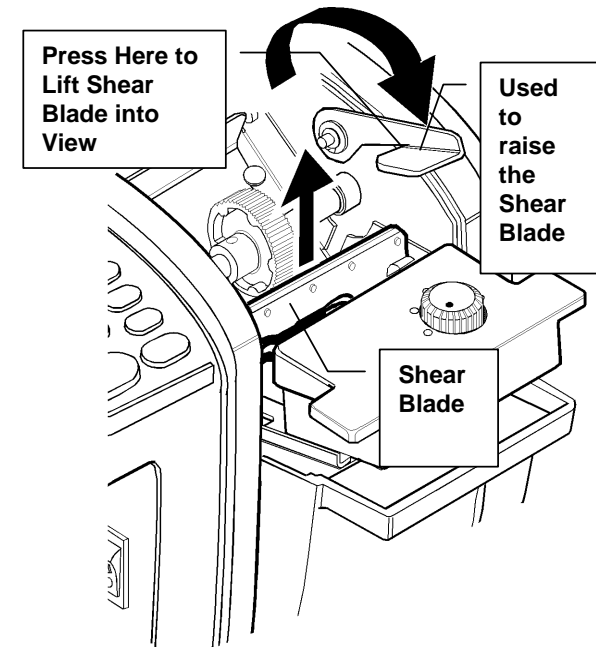


Figure 18 – Moving Shear Blade into View

## Clearing Jams

If the tape jams inside the dispenser near the cutting blade, proceed as follows:


1. Turn the dispenser OFF and UNPLUG it.

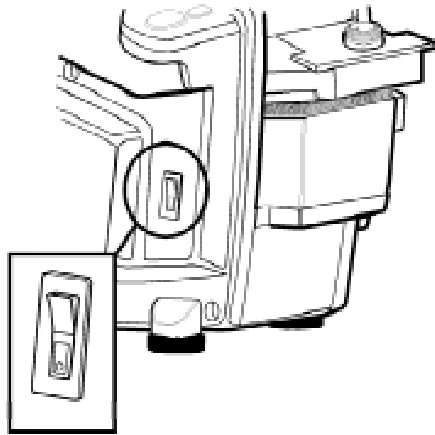

*Figure 19 – On/Off Switch Location*

2. Cut the tape roll just behind the upper tape plate to get it out of your way.
3. Remove the upper tape plate.
4. Raise the shear blade by moving the lever located to the right of the feed wheel forward.
5. Pull out any jammed tape. Push the lever back to lower the shear blade to its normal operating position.

6. Swing the heater assembly up out of the way and check for and clear any jams in front of the shear blade.
7. Replace the upper tape plate and feed the tape back into position when you have cleared the jam. See Figures 20 and 21.

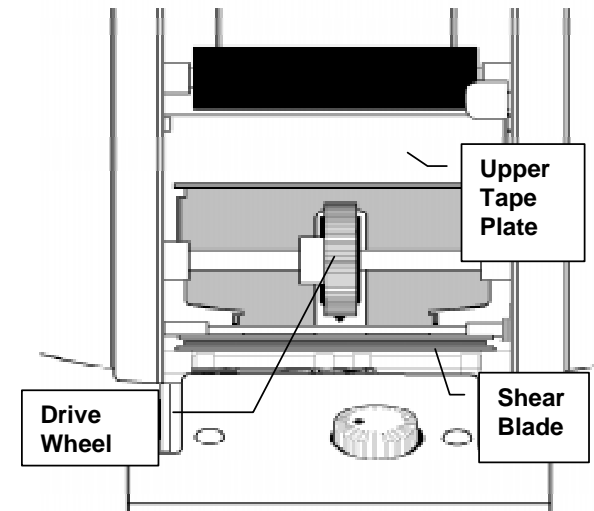

*Figure 20 - Installing the Upper Tape Plate*

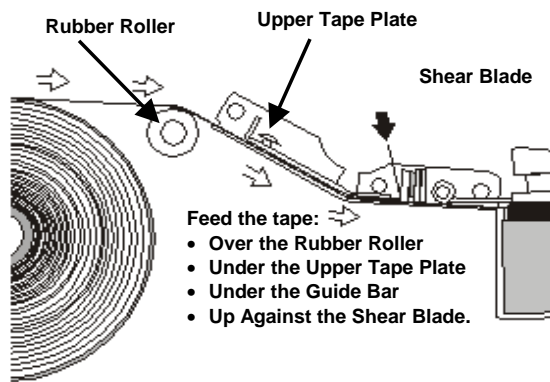



Figure 21 - Feeding the Tape

## Changing the Fuse

If the dispenser is plugged in but doesn't work, it is probably the safety interlock switch. The safety interlock switch makes contact when the top cover is properly closed. Before performing any other diagnostic checks, ensure that the top cover is fully closed and that the switch is activated when the cover is closed.

If the top cover *is* properly closed and the on/off switch doesn't light in the "ON" position, it may indicate a blown fuse. Proceed as follows:

1. Unplug the dispenser's power cord from the wall.
2. Determine if the outlet is OK. Test the outlet with a light or other device.
3. If the outlet is OK, remove the fuse holder from the electrical panel at the rear of the dispenser and check the fuse to see if it is blown. A break in the filament (the thin wire running the length of the fuse) indicates the fuse is blown. See Figure 22. Use a continuity tester to check the fuse if you are unsure.

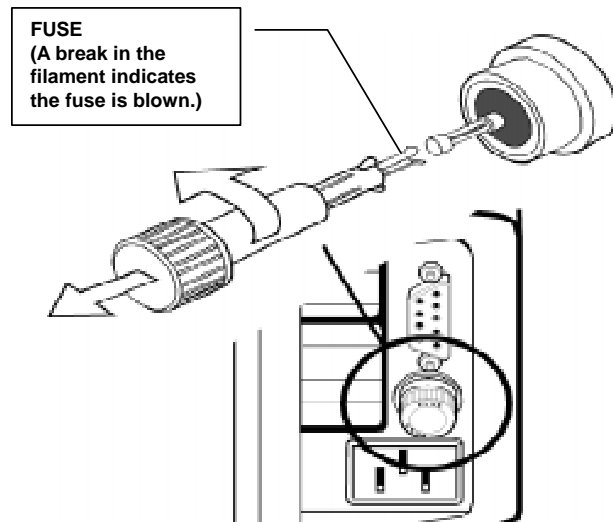


*Figure 22 - Fuse Holder Location*

- If the fuse is blown, replace it with one rated at AL T2 250V.
- If the fuse is OK and the system is still not working, contact your dealer for service or call Better Packages for assistance at:  
**1 (800) 237-9151 (in the US only) or**  
**1 (203) 925-2884 (outside of US)**

## Lubrication

The blade oiler is a felt pad that presses lightly on the back of the shear blade.

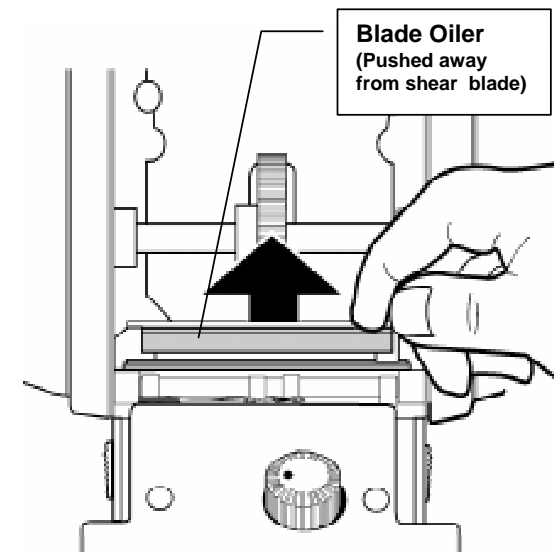

*Figure 23 - Blade Oiler Location*

1. Turn the dispenser off and unplug it.
2. Pull back gently on the blade oiler to move it away from the shear blade.
3. Keep the felt pad slightly moist by adding several drops of light machine oil at regular weekly or monthly intervals depending on use. **Do not over oil.** The oil will keep your shear blade lubricated for clean, fast cutting.

4. Gently push the oiler back into position next to the shear blade.
5. Plug the dispenser back in.

**NOTE:** All other moving parts of the machine are permanently lubricated and **SHOULD NOT BE LUBRICATED**. Putting oil or grease on the oilite bearings clogs them up and makes them wear prematurely.



**CAUTION:** Do not oil the feed roller shaft.



**WARNING:** DO NOT USE SPRAY LUBRICANTS, SPRAY CLEANER OR OTHER FLAMMABLE LIQUIDS, ON OR INSIDE THIS TAPE DISPENSER.

## CLEANING

Inside the dispenser:

- Brush out paper dust
- Do Not use spray cleaners

Exterior surface of the dispenser:

- Use a mild soap and water
- No ammonia based cleaning agents or solvents

## Section 5 – Specifications

### Model Descriptions

(See Page 54 for a complete listing of models)

The Better Packages Model 555 is available in four variations.

- **Standard** models are available with either long or short lengths on their keypads.

**BP555eS** Standard Short Length

**BP555eL** Standard Long Length

- **Automatic** models are also available with either long or short lengths on their keypads.

**BP555eSA** Automatic Short Length

**BP555eLA** Automatic Long Length

The difference between Automatic and Standard models is the capability for the Automatic models to dispense the next piece of tape automatically each time a piece is removed. A repeating pattern of up to three different lengths can be automatically dispensed with this feature. The lengths of these pieces can be standard keypad button lengths or lengths adjusted using the **X2**, the **+** or **-** buttons.

Additionally, Automatic mode allows the preset of two lengths using both



and



### Technical Specifications

Dispenser performance, capacities, dimensions, and weight are listed in the following table:

**NOTE:** Metric equivalents are shown in parentheses ( ) following the English measurements.

| Characteristic             | Measurement  |
|----------------------------|--|
| Tape Width                 | 1.5" – 3.0" (3.8 cm – 7.7 cm)  |
| Maximum Tape Roll Diameter | 10"<br>(25 cm)   |
| Tape Lengths Dispensed     | <b>Short Models</b> (auto & std.)<br>6" to 45" (15 cm – 114 cm)<br><b>Long Models</b> (auto and std.)<br>12" to 90" (30 cm – 228 cm) |
| Dispensing Speed           | 45 inches per second<br>(114 cm per second)  |
| Number of Brushes          | 3  |
| Water Bottle Capacity      | 34 oz (1 liter)  |
| Shipping Weight            | 32 lbs (15 kgs)  |
| Dimensions (L x W x H)     | 20" x 12.5" x 12"<br>(51cm x 32cm x 30cm)  |
| Power Requirements         |  |
| 555eS, eSA, eL, eLA        | 115V 60Hz, 4 Amps  |
| 555eM, eMA                 | 230V 50/60Hz, 2 Amps   |
| 555eJ, eJA                 | 100V 50/60Hz, 4 Amps   |

**NOTE:** Models produced for the Metric market may have keypads with different lengths than those shown in the above table.

### Port Connectivity

The 9-pin female connector at the rear of the dispenser is an Input/Output port (I/O) allowing the user to send commands or retrieve information from the dispenser.

- On **standard models**, this I/O port is active for use with pedal foot switches or other similar devices which use the “contact closure” method of sending a signal.
- On **automatic models**, this I/O port also provides access to the dispenser’s RS-232C serial data port. Pedal foot switches or other “contact closure” devices may still be used on automatic models.

### Connector Configurations

Both standard and automatic models are equipped with 9-pin female D-type connectors.

### Models

| Model     | Length,<br>Unit of<br>Measure | Voltage       | Country<br>Continent<br>Used |
|-----------|-------------------------------|---------------|------------------------------|
| BP555e S  | Short, Inch                   | 115V 60Hz     | US/Canada (1)                |
| BP555e SA | Short, Inch                   | 115V 60Hz     | US/Canada (1)                |
| BP555e L  | Long, Inch                    | 115V 60Hz     | US/Canada (1)                |
| BP555e LA | Long, Inch                    | 115V 60Hz     | US/Canada (1)                |
| BP555e M  | Metric                        | 230V 50Hz     | Europe (2)                   |
| BP555e MA | Metric                        | 230V 50Hz     | Europe (2)                   |
| BP555e J  | Metric                        | 100V 50/60 HZ | Japan (1)                    |
| BP555e JA | Metric                        | 100V 50/60 HZ | Japan (1)                    |
| BP555e F  | Short, Inch                   | 230V 50 Hz    | Far East (1)                 |
| BP555e FA | Short, Inch                   | 230V 50Hz     | Far East (1)                 |

(1) Tape gummed side in, (2) Tape gummed side out

## Section 6 - Warranty & Service

### Limited Warranty

The manufacturer warrants each new Better Packages machine and accessory to be free from defects in material and workmanship under normal and proper use, its obligation under this warranty being limited to making good any defective parts within two years after delivery to the original purchaser.

The Company will replace any defective parts within warranty, on a no-charge basis. The Distributor will furnish for the first 6 months, without charge necessary labor, or instruct the customer's Maintenance Department in servicing the machine.

This warranty does not include motor brushes, water brushes or cutter blades that are replaced for normal usage unless proven to be defective.

For service (in or out of warranty), contact  
Uline at 1-800-295-5510.



**A**

**Adjusting the Roll Guides** 3

**Adjustments**

Adjusting the amount of water applied to the tape 35

Adjusting the Roll Guides 3

**Automatic Model**

Automatic Mode 29

Selecting the tape length 20

Standard Mode 28

To activate Automatic Mode 29

To repeat one tape length automatically 29

To repeat the length previously dispensed 28

To repeat three tape lengths automatically 31

To repeat two tape lengths automatically 30

**Attaching the power cord** 14

**B****Better Packages**

Address 56

E-Mail 56

Fax 56

Phone 56

Web Site 56

**C****Cartons, sealing**

Adjusting the amount of water applied to the tape 37

Advantages of water activated gummed tape 32

Applying tape to the carton 39

Choosing the best tape for the application 33

Choosing the correct tape length 39

Different grades of sealing tape 35

Identifying types of tape 33

Proper tape moistening 36

Selecting tape 35

Setting the heater controls 38

What you should know about glue formulas 34

**Cautions** Front of manual

**Changing the fuse** 48

**Checking the upper tape plate** 7

**Cleaning**

Cleaning - inside and out

Cleaning the shear blade 44

**Clearing jams** 45

**Contacting Better Packages** 56

**Customer Survey Form** Front of manual

**D****E**

**E-Mail** 56

**F****Fuse**

Changing the fuse 48

**G****Gummed Tape**

Advantages of water activated gummed tape 32

**H****Heater Controls**

Adjusting the settings on the heater assembly 18

Setting the heater controls 38

**I**

Installing the bottle and water tank 9

**J**

Jams, Clearing 45

**K****L**

Loading the tape 5

Lubrication 50

**M****Maintenance**

Cleaning - inside and out

Cleaning the shear blade 44

Clearing jams 45

Changing the fuse 48

Lubrication 50

Washing the tank, brushes, and bottle 42

Model descriptions 52

Mounting to a work bench 12

**N****O****Operation**

Adjusting the setting on the heater assembly 18

Selecting the tape length (Automatic) 20

Selecting the tape length (Standard) 19

To adjust the length of a number button then double it 26

To dispense a length of tape twice the length of a number button 25

To dispense a random length of tape 21

To dispense a specific length of tape 22

To dispense a tape longer than the amount on the number button 23

To dispense a tape shorter than the amount on the number button 24

To repeat the length previously dispensed (Automatic) 28

To repeat the length previously dispensed (Standard) 27

Turning the system "ON" 17

**P**

|                                       |                 |
|---------------------------------------|-----------------|
| <b>Port connectivity</b>              | 54              |
| <b>Power cord, attaching</b>          | 14              |
| <b>Prepare the unit for operation</b> | 3               |
| <b>Proprietary Notice</b>             | Front of manual |
| <b>Publication Notice</b>             | Front of manual |

**Q****R****Repeating Tape Lengths**

|  |    |
|--|----|
| Automatic Model                            |    |
| To repeat one tape length automatically    | 29 |
| To repeat the length previously dispensed  | 28 |
| To repeat three tape lengths automatically | 31 |
| To repeat two tape lengths automatically   | 30 |
| Standard Model                             |    |
| To repeat the length previously dispensed  | 27 |

**Roll Guides**

|                           |   |
|---------------------------|---|
| Adjusting the Roll Guides | 3 |
|---------------------------|---|

**S****Sealing Cartons**

|   |    |
|---|----|
| Adjusting the amount of water applied to the tape | 37 |
| Advantages of water activated gummed tape         | 33 |
| Applying tape to the carton                       | 39 |
| Choosing the best tape for the application        | 33 |
| Choosing the correct tape length                  | 39 |
| Different grades of sealing tape                  | 35 |
| Identifying types of tape                         | 33 |
| Proper tape moistening                            | 36 |
| Selecting tape                                    | 35 |
| Setting the heater controls                       | 38 |
| What you should know about glue formulas          | 34 |

**Service**

|                                       |    |
|---------------------------------------|----|
| Cleaning - inside and out             |    |
| Cleaning the shear blade              | 44 |
| Clearing jams                         | 45 |
| Changing the fuse                     | 48 |
| Lubrication                           | 50 |
| Washing the tank, brushes, and bottle | 42 |

**Service Contact**

|              |    |
|--------------|----|
| E-Mail       | 56 |
| Phone number | 56 |

**Setup**

|                                      |    |
|--------------------------------------|----|
| Adjusting the Roll Guides            | 3  |
| Attaching the power cord             | 14 |
| Checking the contents                | 1  |
| Checking the upper tape plate        | 7  |
| Fill out the Warranty Card           | 2  |
| Installing the bottle and water tank | 9  |
| Loading the tape                     | 5  |
| Mounting to a work bench             | 12 |
| Prepare the unit for operation       | 3  |
| Unpacking the tape dispenser         | 1  |

**Shear Blades**

|                           |    |
|---------------------------|----|
| Cleaning the shear blades | 44 |
|---------------------------|----|

**Specifications**

|                          |    |
|--------------------------|----|
| Model descriptions       | 52 |
| Port connectivity        | 54 |
| Technical specifications | 53 |

**T****Tape**

|  |    |
|--|----|
| Adjusting the amount of water applied to the tape                | 37 |
| Advantages of water activated gummed tape                        | 32 |
| Applying tape to the carton                                      | 39 |
| Choosing the best tape for the application                       | 33 |
| Choosing the correct tape length                                 | 39 |
| Different grades of sealing tape                                 | 35 |
| Identifying types of tape  | 33 |
| Loading the tape   | 5  |
| Proper tape moistening   | 36 |
| Selecting tape   | 35 |
| Selecting the tape length (Automatic))                           | 20 |
| Selecting the tape length (Standard)                             | 19 |
| To adjust the length of a number button then double it           | 26 |
| To dispense a length of tape twice the length of a number button | 25 |
| To dispense a random length of tape                              | 21 |
| To dispense a specific length of tape                            | 22 |
| To dispense a tape longer than the amount on the number button   | 23 |
| To dispense a tape shorter than the amount on the number button  | 24 |
| To repeat the length previously dispensed (Automatic)            | 28 |
| To repeat the length previously dispensed (Standard)             | 27 |

**Tape Plate**

|                                       |    |
|---------------------------------------|----|
| Adjusting the force of the tape plate | 37 |
|---------------------------------------|----|

|                                 |    |
|---------------------------------|----|
| <b>Technical specifications</b> | 53 |
|---------------------------------|----|

**U****Unpacking and Setup**

|                                      |    |
|--------------------------------------|----|
| Adjusting the Roll Guides            | 3  |
| Attaching the power cord             | 14 |
| Checking the contents                | 1  |
| Checking the upper tape plate        | 7  |
| Fill out the Warranty Card           | 2  |
| Installing the bottle and water tank | 9  |
| Loading the tape                     | 5  |
| Mounting to a work bench             | 12 |
| Prepare the unit for operation       | 3  |
| Unpacking the tape dispenser         | 1  |

|                                     |   |
|-------------------------------------|---|
| <b>Unpacking the tape dispenser</b> | 1 |
|-------------------------------------|---|

**V****W****Warranty Card**

|                            |    |
|----------------------------|----|
| Fill out the Warranty Card | 2  |
| Limited Warranty           | 55 |

**Water Bottle and Tank**

|                                      |   |
|--------------------------------------|---|
| Installing the bottle and water tank | 9 |
|--------------------------------------|---|

|                 |    |
|-----------------|----|
| <b>Web Site</b> | 56 |
|-----------------|----|

**X****Y****Z**