

Meridian Digital Telephones

M3902

M3903

M3904

Quick Reference Guide



M3902, M3903, and M3904 Meridian Digital Telephones **1**

Your Telephone Call Features **3**

Use Auto Dial	3
Make a Call	4
Make a call while on-hook	5
Redial last number called	5
Use Ring Again (M3902)	6
Use Ring Again (M3903 and M3904)	7
Use Hot Line	8
Use Speed Call (M3902)	8
Use Speed Call (M3903 and M3904)	9

Receive a call **11**

Place a call on Hold	11
Transfer a call (M3902)	12
Transfer a call (M3903 and M3904)	13

Handle multiple calls **14**

Use Call Waiting	14
Forward calls (M3902)	14
Forward calls (M3903 and M3904)	15

Additional call features **17**

Use Call Pickup	17
Set up a Conference call (M3902)	18
Set up a Conference call (M3903 and M3904)	18
Join a call	19
Engage Group Listening	20
Use the Voice Messaging control screens (M3903 and M3904)	20

Options List **22**

Select a language	23
Change a Feature Key label	23
Adjust Screen contrast	25
Adjust volume	25

Choose Ring type	26
Select Call Log options	26
Use Live dial pad	27
Select Preferred name match	27
Set up area code	27
Enable Call timer	28
Select Date/time format	28
Enable Key click	28
Use Headset port on call	29
Activate Headset port external alerter	29
Use Call indicator light	29
Set On hook default path	30
Display diagnostics	30
Activate Group Listening	31

Directory display and controls **32**

Identify specialized keys	32
Use Directory password protection	33

Manage Call Log **35**

Access and use the Callers List (M3903)	35
Access and use the Callers List (M3904)	36
Use the Redial List	37

Use the Personal Directory **39**

Access the Personal Directory	39
Add a Personal Directory entry	39
Add an incoming call	41
Delete or edit a Personal Directory entry	42
Delete your Personal Directory	43
Use the Personal Directory to make a call	43
Use Card View	44
Search for an entry	44
Copy a number from the Redial List	45

Set-to-Set Messaging **46**

 
Corporate Directory	48
Virtual Office	50
Secure your telephone	52

M3902, M3903, and M3904 Meridian Digital Telephones

There are five models in the M3900 Series Meridian Digital Telephone portfolio. This document describes the **M3902**, **M3903**, and **M3904** features and how to use them. For user information on the M3901, refer to the *M3900 Series Meridian Digital Telephone User Guide*. For information on the M3905, refer to the *M3905 Call Center Meridian Digital Telephone User Guide*.


The **M3902** has one Line (DN) Key and three Programmable Feature Keys (self-labeled).

M3902 telephone

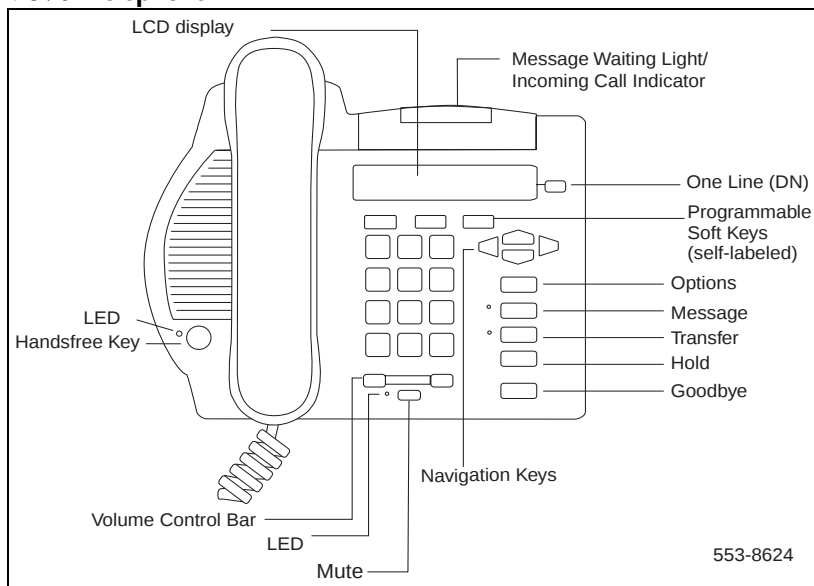


The **M3903** has two Programmable Line (DN)/Feature Keys (self-labeled) with two features or lines (DNs) configured on each key. The **M3903** also has four Context Sensitive Soft Keys (self-labeled).

 M3903 telephone

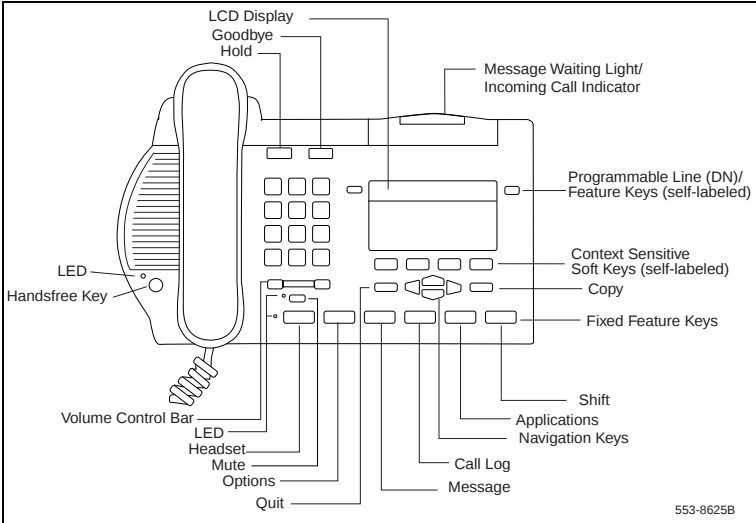

The **M3904** has six Programmable Line (DN)/Feature Keys (self-labeled), with two features or lines (DNs) configured on each key. The **M3904** also has four Context Sensitive Soft Keys (self-labeled).

 M3904 telephone

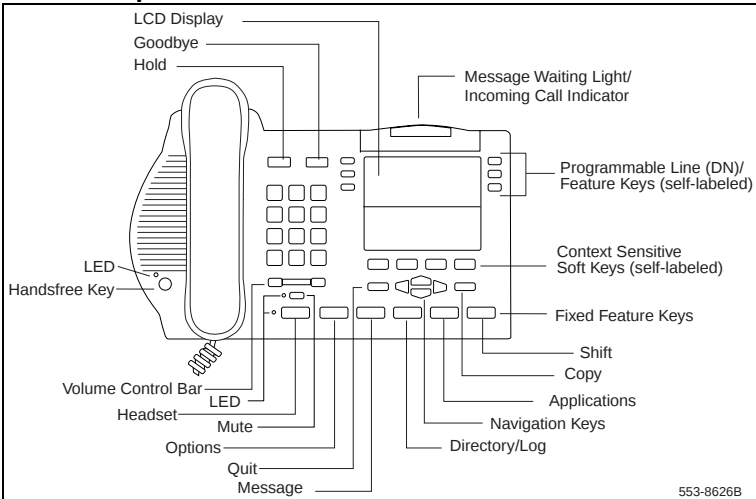

Your Telephone Call Features

Your M3900 Series Meridian Digital Telephone provides easy access to a wide range of business features. Your system administrator assigns features to your telephone and provides you with passwords and other codes as required.

This section describes the features available for your telephone and how to use them.

Use Auto Dial

The **Auto Dial** feature allows the user to press one Feature Key (Auto Dial Key) to dial a specific telephone number automatically. This feature must be enabled by your network administrator.

To use Auto Dial:



AutoDial



1. Lift the **handset**.
2. Press the associated **Auto Dial** Key.
This automatically dials the number.

To display the Auto Dial number (M3903 and M3904):

Display



AutoDial



1. Press the **Display** Key.
Note: On the Meridian SL-100, press the **Auto Dial** Key to display the number.
2. Press the configured **Auto Dial** Key.
The number appears on the display.

To store an Auto Dial number:

AutoDial



AutoDial



1. Press the **Auto Dial** Key, without lifting the handset.
2. **Dial** the number to be stored on the Auto Dial Key.
3. Press the **Auto Dial** Key again.
The number is stored on the key.

Note: To change the key label "AutoDial", select **Change feature key label** from the **Options List** menu. Please see "Change a Feature Key label" on page 23 for detailed instructions.

Make a Call

To make a call from your telephone, use the following procedure:



or

2498



or



or



1. Lift the **handset**.

or

Press the **Line** (DN) Key.

or

Press the **Handsfree** Key.

Note: The Handsfree Key must be enabled by the network administrator

or

Press the **Headset** Key if you have a headset connected to your telephone (available on the **M3903** and **M3904**).

2. **Dial** the number.

Note: Whenever you see the message "Lift the **handset**." in this guide, you may alternatively press a free Line (DN) Key, the Handsfree Key, or Headset Key (if a headset is connected). You receive a dial tone from each action.

Make a call while on-hook

Leave the handset in the cradle while you dial a number.

To dial on-hook:

2498



1. Press a **Line** (DN) Key.
2. **Dial** the number when you receive a dial tone.
3. Lift the **handset** to speak when the called party answers.

If the called number is busy:



or

Ring Again



Press the **Goodbye** Key to release the line.

or

Press the **Ring Again** Key.

Redial last number called

The **Last Number Redial** feature allows you to automatically redial the last number you dialed. This feature must be enabled by your network administrator.

To use Last Number Redial:



2498



1. Lift the **handset**.
2. Press a **Line** (DN) Key.

To use Last Number Redial on a handsfree call:

2498



2498



Press the **Line** (DN) Key twice.

The last number you dialed is automatically redialed.

Note: On Meridian SL-100, press the  Key twice.

Use Ring Again (M3902)

Use the **Ring Again** feature when you dial a number and receive a busy tone or no answer. The Ring Again feature lets you know when the person you dialed is available or has used their telephone. The feature notifies you when to redial your party. The Ring Again feature automatically redials the number.

To use Ring Again:



RingAgain



To call a Ring Again party when you receive notification:



RingAgain



To cancel Ring Again before notification:

RingAgain



1. **Dial** a number and receive a busy tone or no answer.

Note: On the Meridian SL-100, Ring Again is available on busy tone only.

2. Press the **Ring Again** Key.

When the number you want to reach is available, or the person has re-used their set, you hear the Ring Again tone.

1. Lift the **handset**.
2. Press the **Ring Again** Key.

Press the **Ring Again** Key a second time.

Use Ring Again (M3903 and M3904)

Use the **Ring Again** feature when you dial a number and receive a busy tone or no answer. The Ring Again feature lets you know when the person you dialed is available or has used their telephone. The feature notifies you when to redial your party. The Ring Again feature automatically redials the number.

To use Ring Again:



RingAgn



To call a Ring Again party when you receive notification:



RngCall



To cancel Ring Again before notification:

Canc1RA



1. **Dial** a number and receive a busy tone or no answer.

Note: On the Meridian SL-100, Ring Again is available on busy tone only.

2. Press the **Ring Again** Key.

The screen displays Ring again is active.

When the number you want to reach is available, or the person has re-used their set, you hear the Ring Again tone and the screen displays Party free, select line.

1. Lift the **handset** or press a Line (DN) Key.
2. Press the **Ring Call** Key.

Press the **Cancel Ring Again** Key. The screen displays Ring Again is cancelled.

Use Hot Line

The network administrator can program a **Hot Line** Key that allows you to dial a specific number automatically. The network administrator can apply other features to the Hot Line, such as Call Redirection, so that the Hot Line call is answered by a person—not a mail box.

To use Hot Line:

Hotline



Press the **Hot Line** Key.

The Hot Line Key automatically dials the number.

Note 1: If your main Line (DN) is a Hot Line, lift the handset. The Hot Line Key dials the number automatically.

Note 2: On the Meridian SL-100, the Automatic Line (AUL) feature is the same as the Hot Line feature.

Use Speed Call (M3902)

The **Speed Call** feature allows you to automatically dial frequently called numbers by entering a one, two, or three digit code. Contact your network administrator to determine the capacity of your Speed Call list.

A telephone designated as a Speed Call Controller can program or edit the Speed Call list. This feature must be enabled by your network administrator.

To store a Speed Call number:

SPcCtlr



1. Press the **Speed Call Controller** Key.

The triangular icon flashes, which indicates it is in programming mode.

2. **Dial** a one, two, or three digit code and associated telephone number when the phone prompts.

Note: Dial the access code (if required) followed by the internal, external, or long-distance telephone number.

SPcCtlr



3. Press the **Speed Call Controller** Key again to save the code and number.
The flashing icon turns off.

To make a Speed Call:

SpCttrl



or

SpCUsr



1. Lift the **handset**.
2. Press the **Speed Call Controller** Key or the **Speed Call User** Key.
3. **Dial** the Speed Call code assigned to the telephone number.

Use Speed Call (M3903 and M3904)

The **Speed Call** feature allows you to automatically dial frequently called numbers by entering a one, two, or three digit code. Contact your network administrator to determine the capacity of your Speed Call list.

A telephone designated as a Speed Call Controller can program or edit the Speed Call list. This feature must be enabled by your network administrator.

To store a Speed Call number:

SpCttrl



1. Press the **Speed Call Controller** Key.
The screen displays Enter Code, then number.
2. **Dial** a one, two, or three digit code.
Use the **Clear** Key if you make a mistake. Use the **Exit** Key to leave the screen without storing a speed call number.

Note: A dash is automatically inserted after the required number of digits have been entered.

3. **Dial** the associated telephone number.
Use the **Clear** Key or **Delete** Key if you make a mistake. Use the **Exit** Key to leave the screen without storing a speed call number.

Note: Dial the access code (if required) followed by the internal, external, or long-distance telephone number.

OK



To make a Speed Call:



SpcCtrl



or

SpcUser



 
Press the **OK** Key to save the code and number.

1. Lift the **handset**.
2. Press the **Speed Call Controller** Key or the **Speed Call User** Key.
The screen displays Enter code.
3. **Dial** the Speed Call code assigned to the telephone number.

Receive a call

When you receive an incoming call, your telephone rings and the LCD indicator  flashes.

To answer a call:



or



or



Lift the **handset**.

or

Press the **Handsfree** Key.

or

Press the flashing **Line** (DN) Key when using a headset.

Place a call on Hold

Use the **Hold** feature when you are talking with one party and a second call comes in on a second line. You can answer the second call and retain the original call by putting it on hold.

To place a call on hold:



Press the **Hold** Key.

The LCD indicator flashes beside the Line (DN) on hold.

Note 1: If Automatic Hold is enabled, the active call is automatically put on hold when you answer the second call. On the Meridian SL-100, Automatic Hold is the default.

Note 2: The caller hears music while on hold, if the Music On Hold feature is configured on your system.

To retrieve a call on hold:



Press the **Line** (DN) Key beside the flashing LCD indicator.

Transfer a call (M3902)

Use the **Transfer** feature to direct a call to a third party.



1. Press the **Transfer** Key.

The other party is on hold and you receive dial tone. The LCD indicator lights steadily.

2. **Dial** the number of the telephone where the call is to be transferred.

3. Press the **Transfer** Key again, when you hear the ring, or after you talk to the person at the transfer number.

The LCD indicator goes from steady on to off.

If the person you attempt to transfer the call to is unavailable:



1. Press the **Goodbye** Key.

 
2. Press the **Line** (DN) Key to reconnect to the original call.

The LCD indicator goes from flashing to steady on.

Note: On the Meridian SL-100, press the Transfer Key, dial the number, and hang up. If you press the Transfer Key a second time, you get a three-way conference.

Transfer a call (M3903 and M3904)

Use the **Transfer** feature to direct a call to a third party.

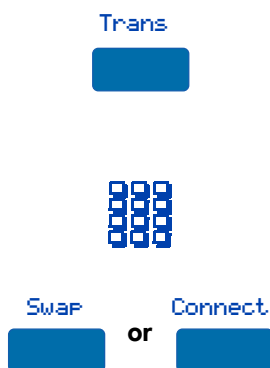

1. Press the **Transfer** Key.
The other party is on hold and you receive dial tone. The screen displays **Call on hold, dial number**.
2. **Dial** the number of the telephone where the call is to be transferred.
3. Press the **Swap** Key to switch between talking with the original caller and the new caller. Press the **Connect** Key to complete the transfer.
The two callers are connected and your telephone is ready to make or receive new calls.

If the person you attempt to transfer the call to is unavailable:



1. Press the **Goodbye** Key.
2. Press the **Line** (DN) Key with the flashing icon to return to your original call.

Handle multiple calls

Use Call Waiting

The **Call Waiting** feature allows you to put your current call on hold while you answer an incoming call. This feature must be enabled by your network administrator.

To answer an incoming call while on another call:



1. Press the **Hold** Key when you hear the tone.

The Call Waiting status icon appears in the display.



2. Press the **Call Wait** Key (**CWait** for **M3902**) to answer the call.

To return to your first telephone call:



1. Press the **Hold** Key, if you want to put the second call on hold.

or

or



Press the **Goodbye** Key to end the second call.



2. Press the **Line** (DN) Key associated with the first call.

Forward calls (M3902)

The **Call Forward** feature allows you to direct your calls to ring at another Line (DN). If the telephone begins to ring, you cannot forward an incoming call in progress.

To forward all your calls:

Forward



1. Press the **Forward** Key.



Forward



To change a previous Call Forward number:

Forward



Forward



To cancel Call Forward:

Forward



To reinstate Call Forward to the same number:

Forward



Forward



2. **Dial** the number to which you want to forward your calls.

3. Press the **Forward** Key again.

1. Press the **Forward** Key.

2. **Dial** the new forward number.

3. Press the **Forward** Key.

Press the **Forward** Key.

Press the **Forward** Key twice.

Forward calls (M3903 and M3904)

The **Call Forward** feature allows you to direct your calls to ring at another line (DN). If the telephone begins to ring, you cannot forward an incoming call in progress.

To forward your calls:

Forward



1. Press the **Forward** Key.

The previously stored forward number appears, if one exists, and the screen displays Enter forward number.



Done



To view the number that your calls
are being forwarded to:

CheckFw



Exit



To cancel Call Forward:

CheckFw



Canc1Fw



2. If desired, use the **Delete** Key to delete each digit in the number shown and **dial** a new number. To edit the number, use the left or right **Navigation** Key to move the cursor without deleting digits. Press **Cancel** to leave this screen without forwarding your telephone.
3. Press the **Done** Key to activate Call Forward.

1. Press the **Check Forward** Key.
2. Press the **Exit** Key to return to the previous screen.
This action will leave Call Forward active.

1. Press the **Check Forward** Key.
2. Press the **Cancel Forward** Key.

Additional call features

Use Call Pickup

The **Call Pickup** feature allows you to pick up a call from any telephone in the same Pickup Group or another Pickup Group. This feature must be enabled by your network administrator.

To answer a call in your own Call Pickup Group:



Pickup



1. Lift the **handset**.
2. Press the **Pickup** Key.

To answer an incoming call in another Call Pickup Group:



GrpPickup



1. Lift the **handset**.
2. Press the **Group Pickup** Key.
3. **Dial** the Pickup Group number of the telephone that is ringing.

Note 1: The network administrator assigns the Pickup Group number.

Note 2: This feature is not applicable on the Meridian SL-100 system.

To answer a call at a specific extension number within your Pickup Group:



DNPickup



1. Lift the **handset**.
2. Press the **DN Pickup** Key.

Note 1: The Meridian SL-100 uses the Directed Call Pickup Feature Access Code (FAC).

Note 2: If the pickup DN is invalid, you receive an overflow burst tone, and the screen displays **Release and try again**. Press the **Goodbye** Key.

Set up a Conference call (M3902)

You can set up a **Conference** call for up to six people (including yourself). Contact your network administrator to determine the maximum number of people your system allows on a conference call.

To set up a conference call:



1. Press the **Conference** Key while you are on a call.

The other party is on hold and you receive a dial tone.

2. **Dial** the number of the person you want to add to the conference.

3. Press the **Conference** Key when the person answers.

Everyone is able to join the conversation.

If the person you attempt to add to the conference is unavailable:



1. Press the **Goodbye** Key.

2. Press the **Line** (DN) Key to return to your original call.

Set up a Conference call (M3903 and M3904)

You can set up a **Conference** call for up to six people (including yourself). Contact your network administrator to determine the maximum number of people your system allows on a conference call.

To set up a conference call:



1. Press the **Conference** Key while you are on a call.

The other party is on hold and you receive a dial tone. The screen displays Call on hold, dial number.



If the person you attempt to add to the conference is unavailable:



 
2. **Dial** the number of the person you want to add to the conference.
3. Press the **Swap** Key to switch between talking with the original caller and the new caller. Press the **Connect** Key to complete the conference.
Everyone is able to join the conversation.

1. Press the **Goodbye** Key.
2. Press the **Line** (DN) Key with the flashing icon to return to your original call.

Join a call

The **Call Join** feature allows you to connect an incoming call to a call already in progress thereby creating a conference call. In order to use Call Join, your telephone must be configured with either a second line (DN) or a Call Waiting Key.

To connect a call on hold (on a different line) to your current call:

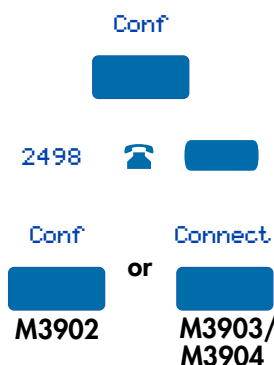

1. Press the **Conference** Key.
2. Press the **Key** that has the caller you want to connect to your current call.
3. Press the **Conference** Key again (M3902), or press the **Connect** Key (M3903 and M3904).

The person on hold joins your conversation.

Engage Group Listening

The **Group Listening** feature allows others to listen to a call through the speaker while you are speaking through the handset. Group Listening must be enabled by your network administrator. Please refer to “Activate Group Listening” on page 31 for instructions on activating the Group Listening option in the **Options List**.

To engage Group Listening while on a call:



Press the **Handsfree** Key. Everyone hears the caller over the speaker, but the caller only hears what is picked up by the handset.

Note: Because the Group Listening feature does not alert the caller that the conversation is being monitored, you must tell the caller that others are listening to the conversation.

Use the Voice Messaging control screens (M3903 and M3904)

The **Voice Messaging** control screens allow you to send commands while connected to your voice messaging system using the Soft Keys instead of the dial pad. **Note:** This feature is not available on the Meridian SL-100.

To use Voice Messaging controls:



Vmsg



Play



1. Lift the **handset**.
2. Press the **Message** Key.
3. Use the **dial pad** to log in to your voice mailbox.
4. Press the **Voice Message** Key.
5. Press the **Play** Key to play your first new message.

Note: Use the **More . . .** Key to view additional message options.

Stop



or

Last



or

Next



or

Delete



or

Skip->



or

Skip<-



Quit



6. Press the **Stop** Key to pause playback of the message. Press **Play** to resume playback

or

Press the **Last** Key to go to the previous message. Press **Play** to playback the message or Press **Last** again to move to previous messages.

or

Press the **Next** Key to go to the next message. Press **Play** to playback the message or Press **Next** again to move to later messages.

or

Press the **Delete** Key to delete the current message.

or

Press the **Skip Forward** Key to advance three seconds in the current message.

or

Press the **Skip Backward** Key to rewind three seconds in the current message.

7. Press the **Quit** Key at any time to exit your voice messaging system. Your telephone is now ready to make or receive new calls.

Options List

The **Options List** allows you to customize certain characteristics of your phone. Screen prompts take you step-by-step through procedures and keep you informed on the status of the following settings: Language, Change feature key label, Screen contrast, Volume adjustment, Ring type, Call log options, Live dial pad, Preferred name match, Area code set-up, Call timer enable, Date/time format, Key click enable, Headset port on call, Headset port external alerter and recorder interface, Call indicator light, On hook default path, and Display diagnostics.

To change any option's setting:



Select



Done



Quit

or



1. Press the **Options** Key.
2. Use the **Navigation** Keys to move up or down through the options list.
3. Press the **Select** Key when the desired option is highlighted.
4. Change the option's settings. Refer to the following pages for details. The display also provides you with information to adjust your selection.
5. Press the **Done** Key to save your changes.
6. Press the **Quit** Key or **Options** Key to exit.

Note: If you press the **Quit** Key or **Options** Key before you press the **Done** Key, you exit the Options List without saving your changes.

Select a language

The display is available in multiple languages. After you select **Language...** from the **Options List** menu,



Deutsch

Select



1. Use the **Navigation** Keys to highlight the desired language (e.g., German).

2. Press the **Select** Key.

Press the **Done** Key to save changes. Press the **Quit** Key or **Options** Key to exit.

Change a Feature Key label

You can change the name on the Programmable Line (DN)/Feature Keys (self-labeled). These keys are located on both sides of the top portion of the display area.

To change a Feature Key label:



Change feature key label

Select



Select



AutoDial



1. Use the down **Navigation** Key to highlight Change feature key label.

2. Press the **Select** Key.

This action takes you to the **Feature Key** menu and highlights Change feature key label.

3. Press the **Select** Key again.

The prompt asks you to select the key you want to change.

4. Press the **Programmable Line (DN)/Feature** Key whose label you want to change, (e.g., **AutoDial**).



Case



5. Press the **Dial Pad** Key that is printed with the first letter in your new label. Press the key until the correct character appears.
6. Use the **Case** Key to change the case of the letter, as needed.
7. Press the right **Navigation** Key once to move the cursor (so you can enter the next letter) when the desired letter appears.
8. Repeat steps 5, 6, and 7 until you have changed the entire label.

Press the **Done** Key to save changes. Press the **Quit** Key or **Options** Key to exit.

Note: For a detailed example of using the dial pad to enter text into your M3900 Series telephone, please see "Add a Personal Directory entry" on page 39.

To restore one key label:



Restore one key label

Select



Purchasing



1. From the **Feature Key** menu, use the down **Navigation** Key to highlight Restore one key label.
2. Press the **Select** Key.
3. Press the **Programmable Line (DN)/Feature** Key (self-labeled) that you want to restore to the original label (e.g., Purchasing).

Press the **Done** Key to return to the **Options List** menu. Press the **Quit** Key or **Options** Key to exit.

Note: You cannot change the label on the primary DN. Press the Shift Key if the label you want to change is on the second layer of the Programmable Line (DN)/Feature Keys (self-labeled).

Adjust Screen contrast

The **Screen contrast** option allows you to adjust the contrast of the display on your telephone. After you select Screen contrast from the **Options List** menu;



From the **Contrast** screen, press the **Lower** Key to decrease the display contrast level, or press the **Higher** Key to increase the display contrast level.

Press the **Done** Key to save changes. Press the **Quit** Key or **Options** Key to exit.

Adjust volume

Note: After you select Volume adjustment... from the **Options List** menu, a list of adjustable items for your telephone model appears. It is recommended that you adjust these parameters while you are on a telephone call so that you can judge the impact of the changes you are making.

To adjust the Ringer volume:

Ringer



1. Select **Ringer** from the **Volume** menu.
2. Press the **Lower** Key to decrease the ringer volume, or press the **Higher** Key to increase the ringer volume.

Press the **Done** Key to save changes. Press the **Quit** Key or **Options** Key to exit.

Use the procedure above to adjust the volume on the following items:

Buzzer

Speaker

Headset listen

Handsfree listen

Headset listen

Headset talk

Headset sidetone

Note 1: Headset listen is adjustable on the **M3903** and **M3904** only.

Note 2: Headset talk and Headset sidetone are adjustable on the **M3904** only.

Note 3: Headset sidetone (**M3904** only) is the sound of your own voice that you hear in the headset speaker.

Choose Ring type

The **Ring type** option allows you to choose from among the various ringing sounds available for your telephone model. After you select **Ring type...** from the **Options List** menu;



1. Use the **Navigation** Keys to scroll through the list of ring types.

Ring type 3

Play



Select



2. Press the **Play** Key to sample a ring tone.
3. Press the **Select** Key to activate the desired ring type (**M3903** and **M3904**).

Press the **Done** Key to save changes. Press the **Quit** Key or **Options** Key to exit.

Select Call Log options

The **Call Log options** (available on the **M3903** and **M3904**) provides a choice of logging all incoming calls, logging only the unanswered calls, or not logging any calls. The Call Log holds up to 10 different incoming entries for the **M3903** and up to 20 for the **M3904**. After you select **Call log options** from the **Options List** menu;



Log all calls

or

Log unanswered calls

From the **Log options** menu, use the **Navigation** Keys to highlight and select either:

Log all calls

or

Log unanswered calls

Note: New call indication must be set to On, if you want Call Log notification.

Press the **Done** Key to save selection. Press the **Quit** Key or **Options** Key to exit.

Use Live dial pad

The **Live dial pad** option (available on the **M3094**) allows you to press any dial pad key to automatically access a dial tone. After you select **Live dial pad** from the **Options List** menu;



From the **Live dialpad** screen, press the **On** Key to turn on Live dial pad, or press the **Off** Key to turn off Live dial pad.

Press the **Done** Key to save changes. Press the **Quit** Key or **Options** Key to exit.

Select Preferred name match

The **Preferred name match** option (available on the **M3904**) displays the names of incoming and outgoing callers as stored in your Personal Directory, if the telephone number matches the one stored in your directory. This option allows you to personalize the displayed names for incoming and outgoing calls. After you select **Preferred name match** from the **Options List** menu;



From the **Name match** screen, press the **On** Key to turn on Preferred name match, or press the **Off** Key to turn off Preferred name match.

Press the **Done** Key to save changes. Press the **Quit** Key or **Options** Key to exit.

Set up area code

Using the **Area code set-up** option (available on the **M3904**) causes the Callers List and Calling Line ID (CLID) display show the number/extension followed by the area code/prefix in parenthesis. This makes it easier to identify local calls and internal calls. You can define up to three area codes. After you select **Area code set-up** from the **Options List** menu

1st Code: 408
2nd Code:
3rd Code:

Use the **Navigation** keys to place your cursor in the first line and use the dial pad to enter an area/country code of your choice.

Note: You can enter up to three codes of your choice.

Press the **Done** Key to save changes. Press the **Quit** Key or **Options** Key to exit.

Enable Call timer

The **Call timer enable** option measures how long you are on each call. After you select **Call timer enable** from the **Options List** menu;



From the **Call timer** screen, press the **On** Key to turn on the Call timer, or press the **Off** Key to turn off the Call timer.

Press the **Done** Key to save changes. Press the **Quit** Key or **Options** Key to exit.

Select Date/time format

There are eight **Date/time formats**. Four formats are based on the 12 hour clock and four are based on the 24 hour clock. After you select **Date/time format...** from the **Options List** menu;



Use the **Navigation** Keys to scroll through the eight formats.

Format 3

Press the **Done** Key to select the highlighted format. Press the **Quit** Key or **Options** Key to exit.

Enable Key click

The **Key click** option causes the handset or speaker to produce a clicking sound when you press the telephone keys. After you select **Key click enable** from the **Options List** menu;



From the **Key click** screen, press the **On** Key to turn on Key click, or press the **Off** Key to turn off Key click.

Press the **Done** Key to save changes. Press the **Quit** Key or **Options** Key to exit.

Use Headset port on call

The **Headset port on call** option (available on the **M3904**) requires that a lamp-type accessory be connected to the headset port. When the Headset port on call option is activated and the user is on a call, the lamp lights providing an indication that a call is in progress. After you select Headset port on call from the **Options List** menu;



From the **On call** screen, press the **On** Key to turn on Headset port on call, or press the **Off** Key to turn off Headset port on call.

Press the **Done** Key to save changes. Press the **Quit** Key or **Options** Key to exit.

Note: Additional equipment is required to implement this option. For more information please contact your Nortel Networks distributor.

Activate Headset port external alerter

When the **Headset port external alerter** option (available on the **M3904**) is activated, it supports a visual or audible alerter and/or recorder device. This device plugs into the Headset port, which is located on the bottom of the telephone. After you select Headset port ext alerter from the **Options List** menu;



From the **External alerter** screen, press the **On** Key to turn on Headset port external alerter, or press the **Off** Key to turn off Headset port external alerter.

Press the **Done** Key to save changes. Press the **Quit** Key or **Options** Key to exit.

Note: Additional equipment is required to implement this option. For more information please contact your Nortel Networks distributor.

Use Call indicator light

You can control the incoming call indicator light (available on the **M3904**). After you select Call indicator light from the **Options List** menu;



From the **Indicator** screen, press the **On** Key to turn on Call indicator light, press the **Off** Key to turn off Call indicator light.

Press the **Done** Key to save changes. Press the **Quit** Key or **Options** Key to exit.

Set On hook default path

The **On hook default path** option (available on the **M3903** and **M3904**) automatically opens the voice path on either the Headset or on Handsfree when you press a Line (DN) Key. After you select On hook default path from the **Options List** menu;



Handsfree selected

or

Headset selected

From the **On hook path** menu, use the **Navigation** Keys to highlight and select either:

Handsfree selected

or

Headset selected

Press the **Done** Key to save selection. Press the **Quit** Key or **Options** Key to exit.

Display diagnostics

The **Display diagnostics** option tests the functionality of your telephone's display screen and indicator lights. This option also provides information on the firmware currently in use on your M3900 series telephone. After you select Display diagnostics from the **Options List** menu;



Use the up or down **Navigation** Keys to scroll through the list and view the changing display screens.

Press the **Done** Key to return to the **Options List** menu. Press the **Quit** Key or **Options** Key to exit.

Activate Group Listening

The **Group Listening** feature allows you to talk on the handset to one party while other people listen to the conversation on your telephone's speaker. The network administrator must enable this feature. After you select **Group listening** from the **Options List** menu;



From the **Group listening** screen, press the **On** Key to turn on Group listening, press the **Off** Key to turn off Group listening.


Press the **Done** Key to save changes. Press the **Quit** Key or **Options** Key to exit.

Note 1: The Group listening selection will not appear in the Options List menu of your telephone unless this feature has been activated by your network administrator.


Note 2: This feature does not have a tone to inform the party on the other end of the call that the conversation is being monitored. You must tell the other party that others are listening to the conversation.

Directory display and controls

 The **M3904** has a three line display. When you press the **Directory/Log** Key, the following screen appears:

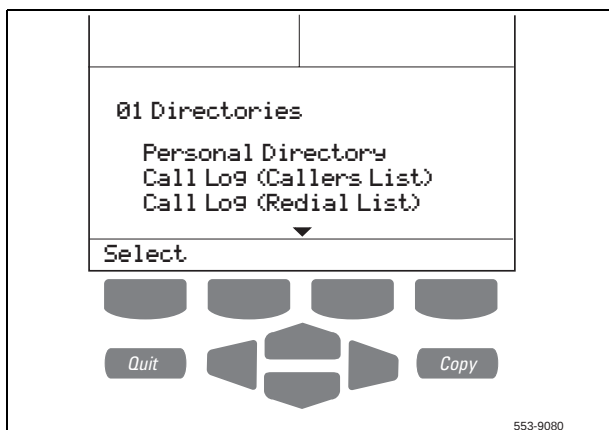

 The **M3903** has a one line display. When you press the **Call Log** Key, the following screen appears:

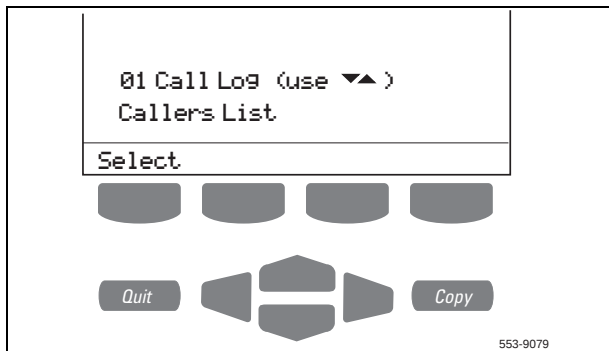

Identify specialized keys

The **Navigation** Keys  enable you to scroll through the features and application functions.

The **Copy** Key  /  copies incoming or outgoing call numbers into your Personal Directory (available on the **M3904**).

The **Quit** Key  ends an active application, which does not affect the status of the calls currently on your telephone.

Use Directory password protection

You can password protect your Call Log, Redial list, and Personal Directory.

Note: Password protection is only available on the M3904.

To enable password protection:



Password Administration

Select



Select



On



Enter



1. Press the **Directory/Log** Key.
2. From the **Directories** menu, use the **Navigation** Keys to highlight Password Administration.
3. Press the **Select** Key.
The **Password Administration** menu appears with Password enabled: OFF highlighted.
4. Press the **Select** Key again to select Password enabled: OFF.
5. Press the **On** Key to enable password protection.
6. **Dial** the password.
7. Press the **Enter** Key.
8. **Dial** (enter) the password again to confirm your password.

Enter



Press the **Done** Key to save changes. Press the **Quit** Key or **Directory/Log** Key to exit.

To disable Personal Directory password:



Enter



Password Administration

Select



Select



Off



Press the **Done** Key to save changes. Press the **Quit** Key or **Directory/Log** Key to exit.

9. Press the **Enter** Key.

1. Press the **Directory/Log** Key.

2. **Dial** the password.

3. Press the **Enter** Key.

4. Use the **Navigation** Keys to highlight **Password Administration**.

5. Press the **Select** Key.

The **Password Administration** menu appears with Password enabled: ON highlighted.

6. Press the **Select** Key again to select Password enabled: ON.

7. Press the **Off** Key to disable password protection.

Manage Call Log

The **Call Log** records the name and number of incoming and outgoing calls and can be password protected on the **M3904**. You can activate Call Log to record all calls, record only the unanswered calls, or record no incoming calls.

The **Callers List** stores incoming calls, and the **Redial List** stores outgoing calls in order of date and time received/made. The oldest call is stored at the top of the list. The newest call is stored at the bottom of the list.

The **M3904** Call log list holds up to 100 entries for incoming calls in the Callers List and 20 entries for outgoing calls in the Redial List. The **M3904** can copy a number from the Callers List or Redial List and store it in the Personal Directory.

The **M3903** Call log list holds up to 10 entries for incoming calls in the Callers List and 5 entries for outgoing calls in the Redial List.

Access and use the Callers List (M3903)

To access your Callers List:



1. Press the **Call Log** Key.



2. Use the **Navigation** Keys to highlight Callers List.

Callers List

Select



3. Press the **Select** Key.

New

Old

or



4. Press the **New** Key to go to the top of the new calls list, or press the **Old** Key to go to the top of the old calls list.

To make a call from the Callers List:



2498

Dial



To exit the Callers List without making a call:

Quit

or

Call Log



1. Use the **Navigation** Keys to scroll through the Callers List and highlight the number you want to call.

Note: If you are calling an external or long distance number, you will need to edit the number to add the access codes required by your system to make an external or long distance call.

2. Press the **Dial** Key to call the number selected. You leave the Callers List when you make the call.

Press the **Quit** Key.

or

Press the **Call Log** Key.

Access and use the Callers List (M3904)

To access the Callers List:

Directory/Log



Call Log (Callers List)

Select



1. Press the **Directory/Log** Key.
2. Use the **Navigation** Keys to highlight Call Log (Callers List).

3. Press the **Select** Key.

New



or

Old



To make a call from the Callers List:



2498

Dial



To exit the Callers List without making a call:

Quit

or

Directory/Log



4. Press the **New** Key to go to the top of the new calls list, or press the **Old** Key to go to the top of the old calls list.

1. Use the **Navigation** Keys to scroll through the Callers List and highlight the number you want to call.

Note: If you are calling an external or long distance number, you will need to edit the number to add the access codes required by your system to make an external or long distance call.

2. Press the **Dial** Key to call the number selected. You leave the Callers List when you make the call.

Press the **Quit** Key.

or

Press the **Directory/Log** Key.

Use the Redial List

To access the Redial List on the M3903:

Call Log



Redial List

Select



1. Press the **Call Log** Key.
2. Use the **Navigation** Keys to highlight Redial List.
3. Press the **Select** Key.



2637

Dial



To access the Redial List on the M3904:



Call Log (Redial List)

Select



2637

Dial



4. Use the **Navigation** Keys to scroll through the Redial List and highlight the number you want to call.

Note: If you are calling an external or long distance number, be sure that the appropriate access codes are included.

5. Press the **Dial** Key. Your call is automatically dialed and you exit the Redial list.

1. Press the **Directory/Log** Key.

2. Use the **Navigation** Keys to highlight Redial List.

3. Press the **Select** Key.

4. Use the **Navigation** Keys to scroll through the Redial List and highlight the number you want to call.

Note: If you are calling an external or long distance number, be sure that the appropriate access codes are included.

5. Press the **Dial** Key. Your call is automatically dialed and you exit the Redial list.

Use the Personal Directory

The Personal Directory (available on the **M3904**) provides a personalized directory of names and telephone numbers. The Personal Directory allows you to add, delete, search, and edit entries and can be password protected. The Personal Directory holds up to 100 entries (an entry is one name and one telephone number). You can add a directory entry by copying the entry from your Callers List or Redial List. You can also add entries with the "Add New" Key or by using the Personal Directory PC Utility application. The Personal Directory PC Utility uses an accessory cartridge to connect your PC and your **M3904** telephone. You can create a directory on your Personal Computer and transfer it to your **M3904** telephone.

Access the Personal Directory



1. Press the **Directory/Log** Key.

Select



2. Press the **Select** Key in the **Directories** menu to select Personal Directories.

Add a Personal Directory entry

After accessing your Personal Directory:

AddNew



1. Press the **Add New** Key.
2. **Dial** the new name.

Example:

To enter the name and telephone number for **Chris**:



1. **Dial** the name using the key pad.



Next



Done



Quit

or

Directory/Log

 


2. Press the dial pad **key** with the desired letter repeatedly until that letter appears on the display.
3. Press the right **Navigation** key to go to the next letter.

Note: The cursor automatically advances to the next position, if a different-from-last key is pressed, or after a short pause.

4. Press the **Next** Key.
 5. Use the **dial pad** to enter the telephone number associated with the name entered above.
- Note:** If you are adding an external or long distance number, be sure to include the access codes required by your system to make an external or long distance call.
6. When you have finished entering all of the digits, press the **Done** Key to save the changes.
 7. Press the **Quit** Key or the **Directory/Log** Key to exit.

Add an incoming call

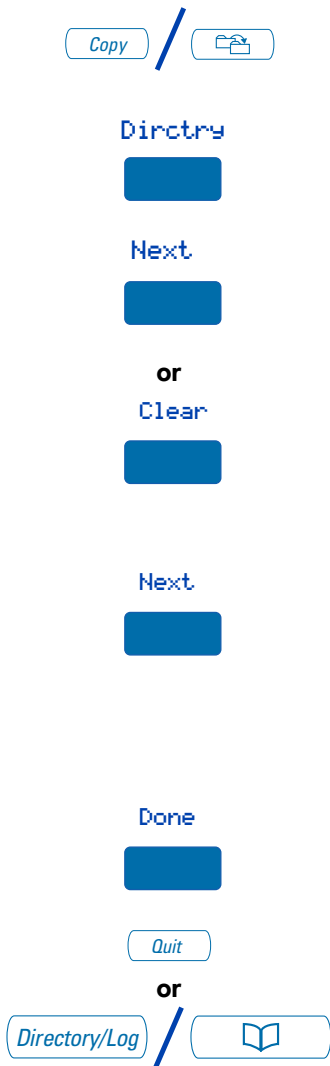

1. Press the **Copy** Key. The displays shows the message **Copy to**.
2. Press the **Directory** Key when the prompt asks **Copy to?**.
3. Press **Next** to copy the incoming call without editing the name. Edit the number, if required (see note for step 4), and go to step 5.
or
Press **Clear** to make changes to the name before saving. Add the name using the **dial pad**, **Delete**, and **Case** Keys as needed.
4. Press the **Next** Key. Make changes to the telephone number, if required.
5. Press the **Done** Key to save the entry in your directory.
6. Press the **Quit** Key or the **Directory/Log** Key to exit.

Note: You can edit the name or number before or after you save to the directory.

Delete or edit a Personal Directory entry

To delete a Personal Directory entry:



Delete



Yes



1. Use the **Navigation** Keys to highlight the entry you want to edit or delete.
2. Press the **Delete** Key to delete the currently highlighted entry in your Personal Directory.
3. Press the **Yes** Key to confirm the deletion.

To edit a Personal Directory entry:

Edit



Next



Done



Quit



or

Directory/Log



1. Press the **Edit** Key to change the telephone number or name.
2. Use the **Navigation** Keys to highlight the character you want to change.
3. Use the **dial pad** to enter the desired changes. Refer to "Add a Personal Directory entry" on page 39 for an example of how to use the dial pad to enter names.
4. Press the **Next** Key. Edit the number if necessary.
5. Press the **Done** Key to save the changes.
6. Press the **Quit** Key or the **Directory/Log** Key to exit.

Delete your Personal Directory

To delete your Personal Directory:

DelList



Yes



or

No



Quit

or

Directory/Log



1. Press the **Delete List** Key. The message Delete all entries? appears.
2. Press the **Yes** Key if you want to delete all the entries in your Personal Directory.
- or
- Press the **No** Key if you want to return to the top of the Personal Directory with no changes made.
3. Press the **Quit** Key or the **Directory/Log** Key to exit.

Use the Personal Directory to make a call

To use the Personal Directory to make a call:



Purchasing

Dial



1. Use the up or down **Navigation** Keys to highlight the desired name or number.
- Note:** If you are dialing an external or long distance number, be sure that your directory entry includes the access codes required by your system to make an external or long distance call.
2. Press the **Dial** Key.

Use Card View

The **Card View** feature provides additional information about the Personal Directory entry.

To look at the Card View:



1. Highlight the **name**.
2. Press the right **Navigation** Key.

To dial from Card View:



1. Use the **Navigation** Keys to show the name and number of the currently selected entry in the Card View.

Note: If you are dialing an external or long distance number, be sure that your directory entry includes the access codes required by your system to make an external or long distance call.

Dial



2. Press the **Dial** Key to place the call.

To exit Card View:



Press the left **Navigation** Key to leave the Card View and return to the selected name.

Search for an entry

You can search for a particular entry in your Personal Directory.

To search for an entry:



Personal Directory

1. Use the **Navigation** Keys to scroll through the **Directories** menu and highlight Personal Directory.

Select



2. Press the **Select** Key.



- Use the **dial pad** to enter the first letter of the name you are seeking. For example, press **2** twice to go to the first entry that begins with the letter "B".

Copy a number from the Redial List

You can copy a number from the Redial List to the Personal Directory.

To copy a number from the Redial List:



2498



Directory



Next



or

Clear



Next



Done



- Use the **Navigation** Keys to highlight the name or number in your Redial List that you want to copy to your Personal Directory.
- Press the **Copy** Key.
- Press the **Directory** Key when the prompt asks **COPY to?**.
- Press **Next** to copy the incoming call without editing the name. Edit the number, if required (see note for step 5), and go to step 6.
or
Press **Clear** to make changes to the name before saving. Add the name using the **dial pad**, **Delete**, and **Case** Keys as needed.
- Press the **Next** Key. Make changes to the telephone number, if required.

Note: If you are copying an external or long distance number, be sure that your directory entry includes the access codes required by your system to make an external or long distance call.

- Press the **Done** Key. The entry is saved to your Personal Directory and you are returned to the Redial List.

Set-to-Set Messaging

With the **Set-to-Set Messaging** application activated (available on the **M3903** and **M3904**), an internal caller using an **M3903** or **M3904** telephone receives a quick visual message, which you have selected, whenever they dial your telephone number. The length of your message is limited to 24 characters. The message is entered through the dial pad keys using a process similar to the one used for entering names in the **M3904**'s Personal Directory. Only one message can be stored in your telephone's memory.

You can check your Call Log to determine whether or not a caller was sent the set-to-set message. A * (**M3903**) or (+) (**M3904**) will appear beside the call log entry of the callers who saw your message. **Note:** This feature is not available on the Meridian SL-100.

To activate Set-to-Set Messaging:



Set to Set Messaging

Select



Edit



1. Press the **Applications** Key.
2. From the **Applications** menu, use the **Navigation** Keys to highlight **Set to Set Messaging**.
3. Press the **Select** Key. The **Set-Set Message** screen appears indicating the status of the feature (on or off) and whether or not a message is stored (defined) in memory.


Note: On the M3904, if you have activated password protection on your Directory/Log, you will need to enter your password to continue.
4. Press the **Edit** Key to enter a new message or edit the stored message.



- From the **Edit Mode** screen, use the **dial pad** to enter a text message. Press the **Delete** Key to delete a character. Press the **Case** Key to toggle between upper and lower case characters. Press the **Cancel** Key to exit the screen without saving changes.


Note 1: Please refer to “Add a Personal Directory entry” on page 39 for detailed instructions on using your telephone’s dial pad to enter text.

 Note 2: Press the **Up Navigation** Key to access special characters you may want to include in your message.

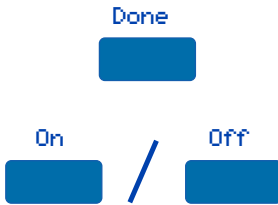

- Press the **Done** Key. Your message is saved and you return to the **Set-Set Message** Screen.
- Press the **On** Key/**Off** Key to toggle the Set-to-Set Messaging status between On and Off.

 Note: If a message has not been defined, the **On** or **Off** Key will not appear. Use the **Edit** Key to enter a message before activating Set-to-Set Messaging.

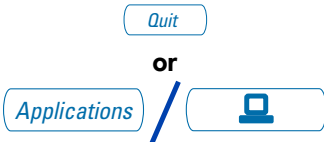

- Press the **Quit** Key or the **Applications** Key to exit the **Set-to-Set Messaging** application.

Note: If you press the **Quit** Key or the **Applications** Key before you press the **Done** Key, you exit the application without saving your changes.

Corporate Directory

The **Corporate Directory** application (available on the **M3903** and **M3904**) allows you to search by entering the characters in the name of the person you are calling, beginning with the last name. Once you have located the name and number of the person, you may use the dial soft key to call the number. On the **M3904**, you may copy an entry from the Corporate Directory and paste it into your telephone's Personal Directory for quick access. **Note:** This feature is not available on the Meridian SL-100 at this time.

To use the **Corporate Directory** application:



Corporate Directory

Select



Done




1. Press the **Applications** Key.
2. From the **Applications** menu, use the **Navigation** Keys to highlight **Corporate Directory**.
3. Press the **Select** Key. The **Cor Dir Find** screen appears.
4. Use the **dial pad** to enter the name of the person you want to call. Enter the last name first. Separate the last name and first name with a comma.

Note 1: The comma is the first character on the **1** Key on your dial pad.

Note 2: You do not need to enter the entire name. When the **Done** Key is pressed, the application will highlight the first directory entry that matches the text that you entered.

 5. Press the **Done** Key. The application highlights the first directory entry that matches the text you entered in step 4. If there is no match, the screen displays **No matches found for . . .** (the text that you entered).

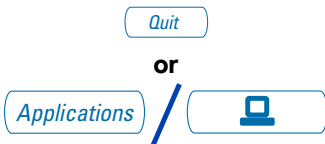

To copy an entry from the Corporate Directory to your telephone's Personal Directory:



6. Use the **Navigation** Keys to scroll through the directory.

Note: The entire directory is available. The "find" process determines which directory entry to select as your starting point.

7. If desired, use the right **Navigation** Key to move from "list" view to "card" view. In card view, the telephone and department numbers for the entry are viewable. Use the left **Navigation** Key to return to list view.

Note: While you are in card view, you may use the up or down **Navigation** Keys to scroll through directory entries.

8. Press the **Dial** Key to call the person whose name is highlighted or Press the **NewFind** Key to return to the **Cor Dir Find** screen.
9. Press the **Quit** Key or the **Applications** Key to exit the **Corporate Directory** application.

1. With the entry selected in the Corporate Directory, press the **Copy** Key.
2. In the **Copy to** screen, press the **Directory** Key to copy the name and telephone number to your Personal Directory. After you complete editing and entering the name and telephone number, you are returned to the Corporate Directory.

Virtual Office

The **Virtual Office** feature allows you to log into a specially designated M3903 or M3904 telephone. When you log into the telephone your individual configuration is downloaded to the telephone for line (DN) and feature access. Virtual Office is ideal for use on a telephone which may be assigned to different users depending on the hour-of-the-day or the day-of-the-week.

To logon to the Virtual Office telephone:



1. Lift the **handset**.
2. **Dial** the Virtual office Terminal Log iN (VTIN) FFC on the Meridian 1 or the Virtual Office Worker iN (VOWIN) FAC on the Meridian SL-100.
3. From the **VTN Login** screen, **Enter** your password using the telephone's dial pad.

On the Meridian SL-100, you will receive dial tone. Enter the VOW authorization code, if required on your system; then, after you receive dial tone, Enter your personal authorization code.

Note: If you make a mistake while entering a code or number on the Meridian SL-100, press the  Key and then re-enter the code

4. The screen will prompt you to Enter your User ID. Use the dial pad to **Enter** the primary line (DN) assigned to your Virtual Office telephone.
5. On the Meridian SL-100 only, after you receive dial tone, **Enter** your passcode.

Once your login information is verified, your Line (DN) Key(s), Features, and associated soft labels are downloaded to the telephone.

Note 1: If your Virtual Office telephone is configured as an M3903, you may only login to an M3903. If your Virtual Office telephone is configured as an M3904, you may only login to an M3904.

Note 2: If two or more users are attempting to login at the same moment, the system processes the login information for the first user. The other users will receive a *System busy, try later.* message. Wait a moment and try to login again.

To logoff the Virtual Office telephone:



or

VTLF FFC



1. Lift the **handset**.
2. **Dial** the Virtual office Terminal Log off (VTLF) FFC on the Meridian 1 or the Virtual Office Worker OUT (VOWOUT) FAC on the Meridian SL-100.

or

If available, **Press** the autodial key which has been configured to dial the VTLF FFC.

Note: You can not be logged on to more than one Virtual Office telephone at any time. If you attempt to log on to a second Virtual Office telephone you will receive a *Same user already login.* message. Contact your network administrator to be logged off the previous Virtual Office telephone.

Secure your telephone

You can lock your telephone with a password to prevent unauthorized use of your telephone. **Note:** The Meridian SL-100 does not support this feature.

To lock your telephone:



1. Lift the **handset**.
2. **Dial** the Lock Flexible Feature Code (FFC) and your Electronic Lock Password.

Note: If you perform this operation from someone else's telephone, dial your line (DN).



3. Press the **Goodbye** Key.

To unlock your telephone:



1. Lift the **handset**.
2. **Dial** the Unlock Flexible Feature Code (FFC) and your Electronic Lock Password.

Note: If you perform this operation from someone else's telephone, dial your line (DN).



3. Press the **Goodbye** Key.

To change your password:



1. Lift the **handset**.
2. **Dial** the Password Change Flexible Feature Code (FFC) and your current password. **Dial** your new password twice (for verification).



3. Press the **Goodbye** Key.

Title to and ownership of Meridian SL-1 software shall at all times remain with Nortel Networks. Meridian SL-1 software shall not be sold outright and the use thereof by the customer shall be subject to the parties entering into software agreements as specified by Nortel Networks.

Information contained in this document is subject to change. Nortel Networks reserves the right, without notice, to make changes in equipment design or program components as progress in engineering, manufacturing or technology may warrant.

Reordering number: NT2F81AB A0789451
(c/o 15 each per package P0907178)

Internal Manufacturing part number:
P0907178
Issue 1.00

Printed in the United States of America
April 2000

www.nortelnetworks.com

NORTEL
NETWORKS