

SonicWALL Internet Security Appliances

Secure Anti-Virus Router 80 Wireless Getting Started Guide

SONICWALL

SonicWALL Secure Anti-Virus Router 80 Wireless Getting Started Guide

Thank you for your purchase of the SonicWALL Secure Anti-Virus Router 80 Wireless, the ultimate security platform for home and small office deployments.

With integrated support for SonicWALL's Gateway Anti-Virus, the SonicWALL Secure Anti-Virus Router 80 Wireless delivers powerful, yet easy-to-use protection against hackers and viruses. The SonicWALL Secure Anti-Virus Router 80 Wireless also provides support for SonicWALL's Content Filtering Service to provide enhanced productivity and network utilization.

This Getting Started Guide contains installation procedures and configuration guidelines for deploying a SonicWALL Secure Anti-Virus Router 80 Wireless on your network. For detailed configuration information, refer to the [SonicOS Standard Administrator's Guide](#) on the SonicWALL Resource CD or on the Web at: <http://www.sonicwall.com/us/support.html>.



Document Contents

This document contains the following sections:

- 1 *Completing Pre-Configuration Tasks* - page 3
- 2 *Registering Your SonicWALL* - page 9
- 3 *Connecting for Initial Setup* - page 11
- 4 *Running the Setup Wizard* - page 17
- 5 *Connecting to Your Network* - page 23

Appendix

Appendix A: Configuring DHCP IP Addressing - page 27

Appendix B: Safety Instructions and Regulatory Information - page 28

In this Section

This section provides pre-configuration information. It is necessary to review this section before setting up your SonicWALL Secure Anti-Virus Router 80 Wireless.

- *System Requirements* section, on page 4
- *Check Package Contents* section, on page 5
- *Obtain Configuration Information* section, on page 6
- *Obtain Internet Service Provider (ISP) Information* section, on page 7

System Requirements

Before you begin the setup process, check to ensure that you have a computer that meets the following requirements. This computer is used to manage your SonicWALL Secure Anti-Virus Router 80 Wireless during the setup process.

- Windows XP, Windows 2000, or Windows NT
- 40MB of disk space available
- One available 10/100 Ethernet (LAN) port
- A Web browser supporting Java and HTTP uploads. Internet Explorer 6.0 or higher, Netscape Navigator 4.7 or higher, Mozilla 1.7 or higher, or Firefox are recommended
- LAN interface set to obtain an IP address automatically (DHCP addressing enabled)



Note: *In order to connect to the SonicWALL Secure Anti-Virus Router 80 Wireless, your computer must be set to obtain an IP address automatically using DHCP. For more information on configuring DHCP on your computer, turn to Appendix A: Configuring DHCP IP Addressing section, on page 27.*

Check Package Contents


- 1 SonicWALL SAVR 80 Wireless
- 2 Wireless Antennas Pair
- 3 Standard power adapter
- 4 Ethernet cable
- 5 SonicWALL Resource CD
- 6 Getting Started Guide
- 7 Release Notes document

Any Items Missing?

If any items are missing from your package, please **contact SonicWALL support**.

A listing of the most current support options is available online at:
<<http://www.sonicwall.com/us/support.html>>

*The included power cord is intended for use in North America only. For European Union (EU) customers, a power cord is not included.

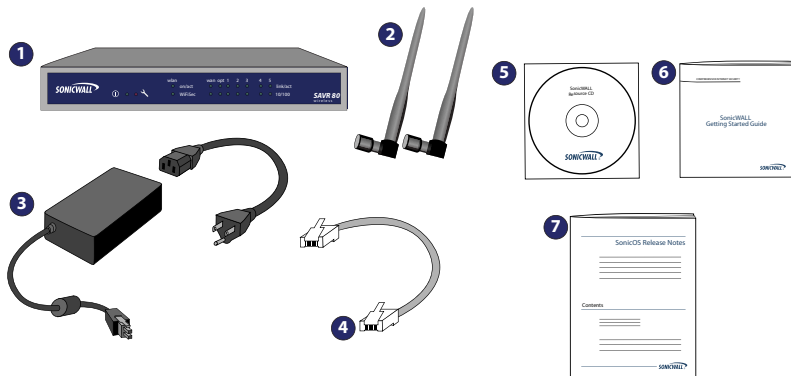

Obtain Configuration Information

Please record the following setup information and keep it for future reference:

Registration Information

Serial Number: _____	Record the serial number found on the bottom panel of your SonicWALL appliance.
Authentication Code: _____	Record the authentication code found on the bottom panel of your SonicWALL appliance.

Networking Information

LAN IP Address: _____._____._____._____	Select a static IP address for your SonicWALL appliance that is within the range of your local subnet. If you are unsure, you can use the default IP address (192.168.168.168).
Subnet Mask: _____._____._____._____	Record the subnet mask for the local subnet where you are installing your SonicWALL appliance.
Ethernet WAN IP Address: _____._____._____._____	Select a static IP address for your Ethernet WAN. <i>This setting only applies if you are already using an ISP that assigns a static IP address.</i>

Administrator Information

Admin Name: _____	Select an administrator account name. (default is <i>admin</i>)
Admin Password: _____	Select an administrator password. (default is <i>password</i>)

Obtain Internet Service Provider (ISP) Information

Record the following information about your current Internet service:

If you connect via	You likely use	Please record
Cable modem, DSL with a router	DHCP	<i>No Internet connection information is usually required, although some service providers require a host name.</i> Host Name: _____
Home DSL	PPPoE	User Name: _____ Password: _____ <i>Note: Your ISP may require your user name in the format: name@ISP.com</i>
T1/E1, Static broadband, Cable or DSL with a static IP	Static IP	IP Address: _____ Subnet Mask: _____ Default Gateway (Router IP Address): _____ Primary DNS: _____ Secondary DNS (optional): _____
Dial-in to a server	PPTP	Server Address: _____ User Name: _____ Password: _____

In this Section

This section provides instructions for registering your SonicWALL Secure Anti-Virus Router 80 Wireless.

- *Registering with MySonicWALL.com* section, on page 10



Note: Product registration is an important part of the setup process, allowing you to enable product support, firmware updates and other key features.

Registering with MySonicWALL.com

1. If you do not yet have a mysonicwall.com account, point your Web browser to <<http://www.mysonicwall.com/>> to register before continuing.
2. Locate and record your SonicWALL Secure Anti-Virus Router 80 Wireless **Serial Number** and **Authentication Code**. This information is printed on the bottom panel of the appliance.

My Serial Number	
My Authentication Code	

3. In your Web browser, go to <<https://www.mysonicwall.com>> and login with your mysonicwall.com username and password.
4. Enter your serial number in the **Quick Register** field and click the small gray arrow. Follow the on-screen instructions.




Quick Register

Enter your Activation Key or Serial Number to activate your product.

0017C5081834 

5. Confirm your **serial number**.
6. Enter a **friendly name** for this appliance.
7. Enter your **authentication code**.

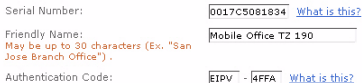

Serial Number: [What is this?](#)

Friendly Name: May be up to 30 characters (Ex. "San Jose Branch Office")

Authentication Code: [What is this?](#)

8. Click the **Register** button to continue.
9. Follow the online prompts to complete the registration process.


In this Section

This section provides initial configuration instructions for connecting your SonicWALL Secure Anti-Virus Router 80 Wireless.

- *Connect Antennas* section, on page 12
- *Apply Power* section, on page 12
- *Connect WAN Port to the Internet* section, on page 14
- *Connect the Computer to the LAN (1) Port* section, on page 14
- *Verify WAN / LAN / WLAN Connection* section, on page 15


Connect Antennas

1. Attach each of the two (2) included antennas to an antenna port on the back of the SonicWALL Secure Anti-Virus Router 80 Wireless.
2. Screw the end of the antenna clockwise to tighten.
3. Adjust the antennas to meet your space / signal requirements.

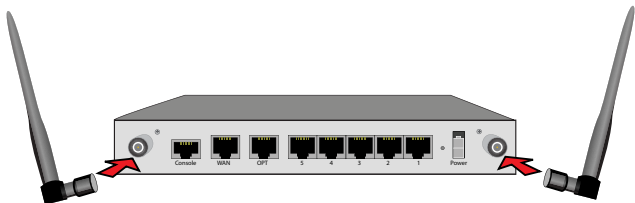


Apply Power

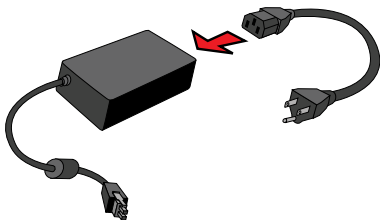

1. Connect the AC plug to the power supply.



2. Plug one end of the power supply to the back of the SonicWALL Secure Anti-Virus Router 80 Wireless.

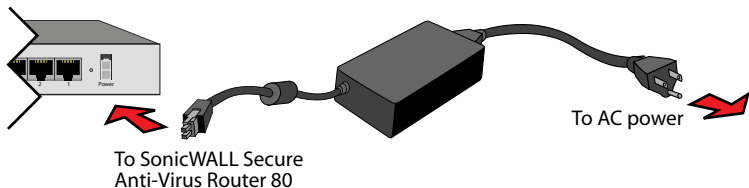3. Connect the AC plug to an appropriate power outlet.




The Power  LED on the front panel lights up green and the Test  LED lights up and blinks while the appliance performs a series of diagnostic tests.

When the Test LED is no longer lit, the SonicWALL Secure Anti-Virus Router 80 Wireless is ready for configuration. If the Test LED stays lit for more than a few minutes, cycle power to the appliance.


Connect WAN Port to the Internet

Using a standard network cable, connect the **WAN** port of the SonicWALL Secure Anti-Virus Router 80 Wireless to your gateway device (usually your cable/DSL modem or T1 router).

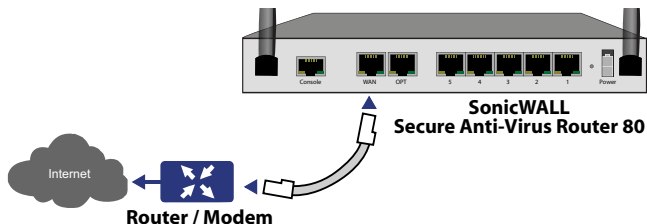


Connect the Computer to the LAN (1) Port

Using the supplied network cable and your management computer, connect the **LAN (Ethernet)** port on the management computer to the **LAN (1)** port on the back of your SonicWALL Secure Anti-Virus Router 80 Wireless.

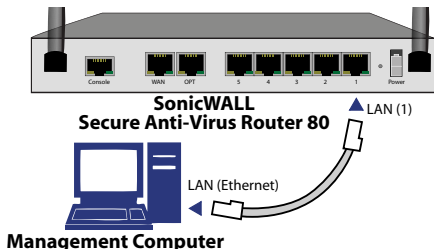

Verify WAN / LAN / WLAN Connection

Once the cables are correctly connected, the **WAN**, **LAN (1)** and **WLAN** lights on the front panel of your SonicWALL Secure Anti-Virus Router 80 Wireless illuminate as illustrated below:

 The image shows the front panel of a SonicWALL Secure Anti-Virus Router 80 Wireless. It features several status lights: a 'wlan' light, an 'on/act' light, a 'WiFiSec' light, a 'wan' light, an 'opt' light, and five numbered LAN ports (1-5) each with a 'link/act' light. A '10/100' light is also present. The router is shown from a slightly elevated perspective.	<p>Link/ACT (WAN / LAN 1) - A solid light Indicates a network connection is present between the SonicWALL and another network appliance. A blinking light indicates connection activity.</p> <p>10/100 (WAN / LAN 1) - A green light Indicates a 10 Mbps port connection. An amber light indicates a 100 Mbps port connection.</p> <p>WLAN (on/act) - A solid light indicates the wireless transmitter is powered on. A blinking light indicates wireless activity.</p>
---	--



Note: *In order to connect to the SonicWALL Secure Anti-Virus Router 80 Wireless, your computer must be set to accept dynamic "DHCP" addressing. For more information on configuring DHCP, turn to Appendix A: Configuring DHCP IP Addressing section, on page 27.*

In this Section

This section provides instructions to log in and configure your SonicWALL Secure Anti-Virus Router 80 Wireless using the SonicWALL Setup Wizard.

- *Log into the Web Management Interface* section, on page 18
- *SonicWALL Setup Wizard* section, on page 20
- *Verify Management Interface Connectivity* section, on page 21
- *Verify WAN (Internet) Connectivity* section, on page 22



Tip: *Before completing this section, fill out the information in Obtain Configuration Information section, on page 6 and Obtain Internet Service Provider (ISP) Information section, on page 7. You will need to enter this information during the **Setup Wizard**.*

Log into the Web Management Interface

Your SonicWALL Secure Anti-Virus Router 80 Wireless employs the use of a Web-based management interface for setup and configuration. Complete the following steps to log into the management interface.

1. In a Web browser on the computer, navigate to **http://192.168.168.168** (the default IP address of the SonicWALL Secure Anti-Virus Router 80 Wireless).

The SonicWALL Web management login screen displays:




Note: Depending on your browser settings, **one or more** security warnings may display while connecting to the SonicWALL Secure Anti-Virus Router 80 Web management interface. Choose to accept the certificates in order to log into the appliance.

2. Log into the SonicWALL Secure Anti-Virus Router 80 Wireless using “**admin**” as the user name and “**password**” as the password. The Setup Wizard screen displays.


If you are having trouble getting the Login screen or Setup Wizard to appear, see page 19 for additional troubleshooting information.

Unable to See the Setup Wizard?

- **If you see the login screen, but not the Setup Wizard:**
 - Configure your Internet browser to allow popups for the SonicWALL Secure Anti-Virus Router 80 Wireless.
 - Log into the security appliance using “**admin**” as the user name and “**password**” as the password. After you log in, click the **Wizards** button on the **System > Status** page.
- **If you do not see the login screen or the Setup Wizard:**
 - Did you correctly enter the SonicWALL Secure Anti-Virus Router 80 Wireless management IP address, *192.168.168.168*, in your Web browser?
 - Is your computer set to accept DHCP addressing or set to a static IP address within the *192.168.168.x* subnet range? If not, see *Appendix A: Configuring DHCP IP Addressing* section, on page 27 for instructions on changing your Local Area Connection settings.
 - Do you have the Ethernet cable connected between your computer and the LAN (1) port on your SonicWALL Secure Anti-Virus Router 80 Wireless?
 - Do you need to add the SonicWALL Secure Anti-Virus Router 80 Wireless to your list of trusted sites? Use the default IP address (*192.168.168.168*) for this purpose.
 - Is the Test  LED on the front panel of your SonicWALL Secure Anti-Virus Router 80 Wireless lit? If the Test LED stays lit for more than a few minutes after the initial power on sequence, cycle power to the SonicWALL Secure Anti-Virus Router 80 Wireless.


SonicWALL Setup Wizard

1. If the **Setup Wizard** does not display upon initial login to the SonicWALL Secure Anti-Virus Router 80 Wireless management interface, click the **Wizards** button in the left-hand navigation panel of the interface.
2. Select the **Setup Wizard** radio button and click the **Next** button to continue.

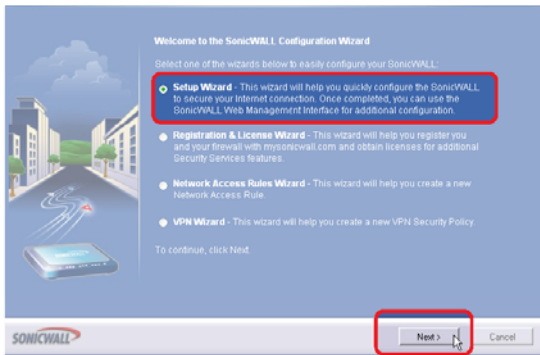

3. Follow the on-screen prompts to complete the Setup Wizard. Refer to the information you recorded in *Obtain Configuration Information* section, on page 6 and *Obtain Internet Service Provider (ISP) Information* section, on page 7 to complete this section.
4. Depending on the changes made during your setup configuration, the SonicWALL may restart.

Verify Management Interface Connectivity

1. If your SonicWALL did not require a restart, skip to the *Verify WAN (Internet) Connectivity* section, on page 22. Otherwise continue with step 2.
2. Wait for the SonicWALL Secure Anti-Virus Router 80 Wireless to reboot. When the Test  LED is no longer lit, the SonicWALL Secure Anti-Virus Router 80 Wireless is ready for login.
3. If the login page does not display after reboot, open a Web browser on the computer and manually navigate to the LAN IP address of your SonicWALL Secure Anti-Virus Router 80 Wireless.
4. Using your new **username** and **password**, log into the appliance.

The **System > Security Dashboard** page (shown below) displays. You have correctly configured the SonicWALL Secure Anti-Virus Router 80 Wireless to work with the computer on your LAN. Complete the next section to verify WAN (Internet) connectivity.




Verify WAN (Internet) Connectivity

Complete the following steps to confirm your Internet connectivity.

1. Using a computer connected to the LAN (1) port, launch a new Web browser.
2. Navigate to an Internet Web site such as <http://www.sonicwall.com>.

If the Web site displays, your SonicWALL Secure Anti-Virus Router 80 Wireless is configured correctly as your gateway device.

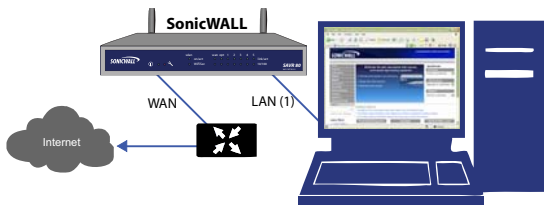

Having Trouble Connecting to the Internet?


- Did you open a new browser window to launch the Web site? Try closing out all browser windows and launching the browser again.
- Is your computer set to accept DHCP addressing or, if using static IP addressing, is your IP address set to a range within the SonicWALL's LAN subnet?
- Is your SonicWALL WAN port connected to your Internet source and showing (link/act, 10/100) activity?
- Verify that the network settings you recorded on page 6 of this guide are correct.
- Did you enter your network information from page 6 of this guide correctly in the Setup Wizard? If you are unsure, turn to the *SonicWALL Setup Wizard* section, on page 20 to run Setup Wizard again.

In this Section

This section provides SonicWALL Secure Anti-Virus Router 80 Wireless basic network connectivity verification and examples.

- *Connect and Configure Your Network* section, on page 24
- *The Front Panel* section, on page 25
- *The Back Panel* section, on page 26

Connect and Configure Your Network

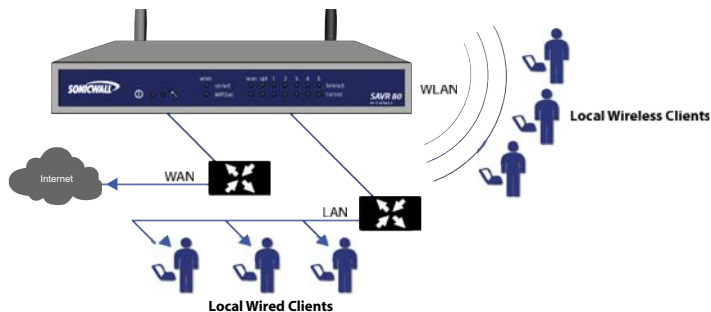


Your SonicWALL Secure Anti-Virus Router 80 Wireless is equipped with a DHCP server. If you enabled this feature in the Setup Wizard, your DHCP-enabled network clients are automatically provisioned by the SonicWALL. Setting up your network is as simple as:

1. Setting your clients to obtain their IP address automatically.
2. Connecting your clients (directly or using a hub/switch) to the LAN ports (1-5) on your SonicWALL Secure Anti-Virus Router 80 Wireless.
3. Reading the [SonicOS Standard Administrator's Guide](#) to configure the features and security services of your SonicWALL Secure Anti-Virus Router 80 Wireless.


Congratulations! You have successfully completed set up of your SonicWALL Secure Anti-Virus Router 80 Wireless. For more detailed information on your SonicWALL Secure Anti-Virus Router 80 Wireless feature set, refer to the latest version of the [SonicOS Standard Administrator's Guide](#).

The Front Panel

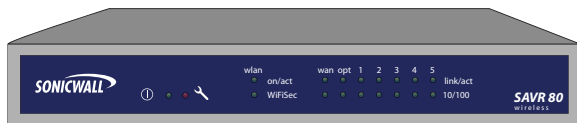

Feature	Description
Power LED	Indicates the SonicWALL Secure Anti-Virus Router 80 Wireless is powered on.
Test LED	Solid: Indicates that the SonicWALL Secure Anti-Virus Router 80 Wireless is in test mode. Blinking: The unit is booting up, or restarting. This can also indicate that the unit is in safe mode.
WLAN	(on/act) Solid indicates the wireless radio is powered on, blinking indicates wireless activity. (WiFiSec) Indicates WiFiSec wireless security is operational.
OPT	<i>The OPT Port is not a supported feature on the SonicWALL Secure Anti-Virus Router 80 Wireless.</i>
WAN	Indicates a device link, activity and connection speed on your WAN port.
LAN (1-5)	Indicates a device link, activity and connection speed on individual LAN ports (numbered 1-5).
Link/ACT	Solid: Indicates a device is connected to the specified port(s). Blinking: Indicates activity on the specified port(s).
10/100	Green: Indicates 10M connection on the specified port(s). Amber: Indicates 100M connection on the specified port(s).

The Back Panel



Feature	Description
Antenna Connections	Provide (2) connection points for the included wireless antennas.
Console Port	<i>The console port is not a supported feature on the SonicWALL Secure Anti-Virus Router 80 Wireless.</i>
WAN Port	Provides a connection between your SonicWALL Secure Anti-Virus Router 80 Wireless and the Internet, usually connecting through a modem or router.
OPT Port	<i>The OPT Port is not a supported feature on the SonicWALL Secure Anti-Virus Router 80 Wireless.</i>
LAN Ports (1-5)	Provides 5 fully-configurable ports for connection between your SonicWALL Secure Anti-Virus Router 80 Wireless and the devices on your network. These ports can be connected directly to a computer, or to a network switch or hub.
Reset Button	Provides the capability to reboot your SonicWALL Secure Anti-Virus Router 80 Wireless to a special diagnostic "safe mode".
Power	Provides a power connection using the supplied AC adaptor.

Appendix A: Configuring DHCP IP Addressing

Complete the following section based on your operating system in order to configure your management computer to obtain an IP address automatically (using DHCP addressing):

Windows Vista

1. From the **Start** menu, right-click **Network** and select **Properties**.
2. In the **Tasks** menu, click **Manage network connections**, the Network Connections windows displays.
3. Right-click on your **Local Area Connection** and select **Properties**.
4. In the list, double-click **Internet Protocol Version 4 (TCP/IP)**.
5. Select **Obtain an IP address automatically** and **Obtain a DHCP address automatically**.
6. Click **OK**, and then click **OK** again for the settings to take effect.

Windows XP

1. From the **Start** menu, highlight **Connect To** and then select **Show All Connections**.
2. Open the **Local Area Connection Properties** window.
3. In the list, double-click **Internet Protocol (TCP/IP)**.
4. Select **Obtain an IP address automatically** and **Obtain a DHCP address automatically**.
5. Click **OK** then click **OK** again for the settings to take effect.

Windows 2000

1. From your Windows **Start** menu, select **Settings**.
2. Open **Network and Dial-up Connections**.
3. Click **Properties**.
4. Highlight **Internet Protocol (TCP/IP)** and click **Properties**.
5. Select **Obtain an IP address automatically** and **Obtain a DHCP address automatically**.
6. Click **OK** for the settings to take effect.

Appendix B: Safety Instructions and Regulatory Information

Regulatory Model/Type	Product Name
APL17-049	Secure Anti-Virus Router 80 Wireless (SAVR 80 WIRELESS)

Mounting the SonicWALL

- Mount in a location away from direct sunlight and sources of heat. A maximum ambient temperature of 104° F (40° C) is recommended.
- Route cables away from power lines, fluorescent lighting fixtures, and sources of noise such as radios, transmitters, and broadband amplifiers
- The included power cord is intended for use in North America only. For European Union (EU) customers, a power cord is not included.
- Ensure that no water or excessive moisture can enter the unit.
- Allow unrestricted airflow around the unit and through the vents on the side of the unit. A minimum of 1 inch (25.4mm) clearance is recommended.
- Consideration must be given to the connection of the equipment to the supply circuit and the effect of overloading the circuits has minimal impact on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings must be used when addressing this concern.

Lithium Battery Warning

The Lithium Battery used in the SonicWALL security appliance may not be replaced by the user. Return the SonicWALL security appliance to a SonicWALL-authorized service center for replacement with the same or equivalent type recommended by the manufacturer. If, for any reason, the battery or SonicWALL security appliance must be disposed of, do so following the battery manufacturer's instructions.

Cable Connections

All Ethernet and RS232 (Console) cables are designed for intra-building connection to other equipment. Do not connect these ports directly to communication wiring or other wiring that exits the building where the SonicWALL is located.

Power Supply Information

If the power supply is missing from your SonicWALL product package, please contact SonicWALL Technical Support at 408-752-7819 for a replacement. This product should only be used with a UL listed power supply marked "Class 2" or "LPS", with an output rated 12 VDC, minimum 1.66 A.

Weitere Hinweise zur Montage

- Wählen Sie für die Montage einen Ort, der keinem direkten Sonnenlicht ausgesetzt ist und sich nicht in der Nähe von Wärmequellen befindet. Die Umgebungstemperatur darf nicht mehr als 40 °C betragen.
- Führen Sie die Kabel nicht entlang von Stromleitungen, Leuchtstoffröhren und Störquellen wie Funksendern oder Breitbandverstärkern.
- Das eingeschlossene Netzkabel ist für Gebrauch in Nordamerikas nur vorgehabt. Für Europäische Union (EU) Kunden, ist ein Netzkabel nicht eingeschlossen.
- Stellen Sie sicher, dass das Gerät vor Wasser und hoher Luftfeuchtigkeit geschützt ist.
- Stellen Sie sicher, dass die Luft um das Gerät herum zirkulieren kann und die Lüftungsschlitze an der Seite des Gehäuses frei sind. Hier ist ein Belüftungsabstand von mindestens 26 mm einzuhalten.
- Vergewissern Sie sich, dass das Gerät sicher im Rack befestigt ist. Insbesondere muss auf nicht direkte Anschlüsse an Stromquellen geachtet werden wie z. B. bei Verwendung von Mehrfachsteckdosen.

Hinweis zur Lithiumbatterie

Die in der Internet Security Appliance von SonicWALL verwendete Lithiumbatterie darf nicht vom Benutzer ausgetauscht werden. Zum Austauschen der Batterie muss die SonicWALL in ein von SonicWALL autorisiertes Service-Center gebracht werden. Dort wird die Batterie durch denselben oder entsprechenden, vom Hersteller empfohlenen Batterietyp ersetzt. Beachten Sie bei einer Entsorgung der Batterie oder der SonicWALL Internet Security Appliance die diesbezüglichen Anweisungen des Herstellers.

Kabelverbindungen

Alle Ethernet- und RS232-C-Kabel eignen sich für die Verbindung von Geräten in Innenräumen. Schließen Sie an die Anschlüsse der SonicWALL keine Kabel an, die aus dem Gebäude herausgeführt werden, in dem sich das Gerät befindet.

Informationen zur Stromversorgung

Sollte das Netzteil nicht im Lieferumfang der SonicWALL enthalten sein, wenden Sie sich diesbezüglich an den technischen Support von SonicWALL (Tel.: +1-408-752-7819). Dieses Produkt darf nur in Verbindung mit einem nach den Normen der Underwriter Laboratories, USA als „UL-gelistet“ zugelassenen Netzteil der Kategorie „Class 2“ oder „LPS“ verwendet werden. Ausgang: 12 VDC Gleichspannung, mind. 1,66 A.

FCC Part 15 Class B Notice

NOTE: This equipment was tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. And, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference using one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from the receiver connection.
- Consult SonicWALL for assistance.

Complies with EN55022 Class B and CISPR22 Class B.

*Refer to the label on the bottom of the unit for device information including Class A or Class B FCC information.

North American Authorized Channels

SonicWALL declares that the APL17-049 (FCC ID: QWU-049) (IC: 4408A-049) when sold in US or Canada is limited to CH1-CH11 by specified firmware controlled in the USA.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters (7.9 inches) between the radiator (antenna) and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

For more information regarding the above statement, please contact SonicWALL, Inc. at: 1143 Borregas Avenue, Sunnyvale, CA 94089-1306, 1-408-745-9600.

Canadian Radio Frequency Emissions Statement

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à toutes la norme NMB-003 du Canada.

VCCI Statement

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

Regulatory Information for Korea



Ministry of Information and Telecommunication Certification Number

All products with country code "" (blank) and "A" are made in the USA.

All products with country code "B" are made in China.

All products with country code "C" or "D" are made in Taiwan R.O.C.

B급 기기 (가정용 정보통신기기)

이 기기는 가정용으로 전자파적합등록을 한 기기로서
주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

WLAN / RLAN
2.4 GHz

Indoor Only	Binnen slechts
D'intérieur Seulement	Innen Nur
Dell'Interno Soltanto	Indoor Somen te
De interior Solamente	

This equipment may be operated in:

Betrieb dieser Ausrüstung wird innen erlaubt:

L'opération de cet équipement est permise dans:

AT	BE	CY	CZ	DK
EE	FI	FR	DE	HU
IE	IT	LT	LU	NL
NO	PL	PT	SK	ES
CH	GB			

Country and channel selection is made in software. Follow user documentation to make country and channel setting.

Land und Kanalauswahl sind in Software gemacht. Folgen Sie Verbraucherdokumentation, um Land und Kanal zu machen, setzend.

La sélection de pays et canal est faite dans le logiciel. Suivez la documentation d'utilisateur pour faire le pays et le canal sélection.

CE 0560

Sonicwall tímto prohlašuje, že tento APL17-049 je ve shodě se základními požadavky dalšími příslušnými ustanoveními směrnice 1999/5/ES.

Undertegnede Sonicwall erklærer herved, at følgende udstyr APL17-049 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

Hiertim erklært Sonicwall, dass sich das Gerät APL17-049 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.

Hereby, Sonicwall, declares that this APL17-049 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Por medio de la presente Sonicwall declara que el APL17-049 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

Par la présente Sonicwall déclare que l'appareil APL17-049 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Con la presente Sonicwall dichiara che questo APL17-049 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Šiuo Sonicwall deklaruoja, kad šis APL17-049 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktivos nuostatas.

Hierbij verklaart Sonicwall dat het toestel APL17-049 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

Sonicwall declara que este APL17-049 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Sonicwall tímto vyhlasuje, že APL17-049 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

Sonicwall vakuuttaa täten että APL17-049 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Sonicwall erklærer herved at udstyret APL17-049 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

Declaration of Conformity

Certificate #: EU00150-A

Application of council Directive: 89/336/EEC (EMC)
73/23/EEC (LVD),
99/5/EC (R&TTE)

Standard(s) to which conformity is declared:

EN55022 (1998) Class B
EN 55024 (1998) A1 (2001)
EN 61000-3-2 (2000)
EN 61000-3-3 (1995) A1 (2001)
EN 60950 (2001) *A11
National Deviations: AT, AU, BE, CH, CN,
CZ, DE, DK, FI, FR, GB, GR, HU, IE, IL, IN,
IT, JP, KR, NL, NO, PL, SE, SG, SI
EN 500 328-1/-2 (1.6.1)
EN 301 489-1 (V1.6.1)
EN 301 489-17 (V1.2.1)

Manufacturer/Responsible Party: SonicWALL
1143 Borregas Avenue,
San Jose, CA 94089 USA

Type of Equipment:

Type Numbers: APL17-049
May be Marketed as: TZ 180 WIRELESS, TZ 180 W
SAVR 80 WIRELESS, SAVR 80 W

I, the undersigned hereby declare that the equipment specified above conforms to the above Directives and Standards. Quality control procedures will ensure series production of equipment will be compliant.

Signature /s/ John Gmuender Date 12/18/06

John Gmuender
V.P. Engineering

Copyright Notice

© 2007 SonicWALL, Inc.

All rights reserved.

Under the copyright laws, this manual or the software described within, cannot be copied, in whole or part, without the written consent of the manufacturer, except in the normal use of the software to make a backup copy. The same proprietary and copyright notices must be affixed to any permitted copies as were affixed to the original. This exception does not allow copies to be made for others, whether or not sold, but all of the material purchased (with all backup copies) can be sold, given, or loaned to another person. Under the law, copying includes translating into another language or format.

Specifications and descriptions subject to change without notice.

Trademarks

SonicWALL is a registered trademark of SonicWALL, Inc.

Microsoft Windows 98, Windows NT, Windows 2000, Windows XP, Windows Server 2003, Internet Explorer, and Active Directory are trademarks or registered trademarks of Microsoft Corporation.

Netscape is a registered trademark of Netscape Communications Corporation in the U.S. and other countries. Netscape Navigator and Netscape Communicator are also trademarks of Netscape Communications Corporation and may be registered outside the U.S.

Adobe, Acrobat, and Acrobat Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the U.S. and/or other countries.

Firefox is a trademark of the Mozilla Foundation.

Other product and company names mentioned herein may be trademarks and/or registered trademarks of their respective companies and are the sole property of their respective manufacturers.

Notes

Notes

Notes





SonicWALL, Inc.

1143 Borregas Avenue
Sunnyvale CA 94089-1306

T +1 408.745.9600
F +1 408.745.9300

www.sonicwall.com



PN: 232-000770-01
Rev A 4/07

©2007 SonicWALL, Inc. is a registered trademark of SonicWALL, Inc. Other product names mentioned herein may be trademarks and/or registered trademarks of their respective companies. Specifications and descriptions subject to change without notice.

